



## Mobile Telephone Forensic Unit.

[http://www.sectorforensics.co.uk/mobile\\_telephone\\_forensics.shtml](http://www.sectorforensics.co.uk/mobile_telephone_forensics.shtml)

# TS 101 267 V6.2.0 (1998-11)

---

*Technical Specification*

**Digital cellular telecommunications system (Phase 2+);  
Specification of the SIM application toolkit for the  
Subscriber Identity Module - Mobile Equipment (SIM - ME)  
interface  
(GSM 11.14 version 6.2.0 Release 1997)**

---



**GSM**®  
GLOBAL SYSTEM FOR  
MOBILE COMMUNICATIONS

**ETSI** 

---

---

**Reference**

RTS/SMG-091114Q6R2 (bqc030o3.PDF)

---

**Keywords**

Digital cellular telecommunications system,  
Global System for Mobile communications (GSM)

**ETSI**

---

**Postal address**

F-06921 Sophia Antipolis Cedex - FRANCE

---

**Office address**

650 Route des Lucioles - Sophia Antipolis  
Valbonne - FRANCE  
Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16  
Siret N° 348 623 562 00017 - NAF 742 C  
Association à but non lucratif enregistrée à la  
Sous-Préfecture de Grasse (06) N° 7803/88

---

**Internet**

secretariat@etsi.fr  
<http://www.etsi.org>

---

**Copyright Notification**

---

No part may be reproduced except as authorized by written permission.  
The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 1998.  
All rights reserved.

# Contents

|                                                              |    |
|--------------------------------------------------------------|----|
| Intellectual Property Rights.....                            | 7  |
| Foreword .....                                               | 7  |
| Introduction .....                                           | 7  |
| 1 Scope.....                                                 | 9  |
| 2 Normative references .....                                 | 9  |
| 3 Definitions, abbreviations and symbols .....               | 11 |
| 3.1 Definitions .....                                        | 11 |
| 3.2 Abbreviations.....                                       | 11 |
| 3.3 Symbols .....                                            | 12 |
| 4 Overview of SIM Application Toolkit.....                   | 12 |
| 4.1 Profile Download.....                                    | 13 |
| 4.2 Proactive SIM.....                                       | 13 |
| 4.3 Data download to SIM.....                                | 13 |
| 4.4 Menu selection.....                                      | 13 |
| 4.5 Call control by SIM .....                                | 13 |
| 4.6 MO Short Message control by SIM .....                    | 13 |
| 4.7 Event download .....                                     | 14 |
| 4.8 Security .....                                           | 14 |
| 5 Profile download .....                                     | 14 |
| 5.1 Procedure.....                                           | 14 |
| 5.2 Structure and coding of TERMINAL PROFILE .....           | 14 |
| 6 Proactive SIM.....                                         | 16 |
| 6.1 Introduction.....                                        | 16 |
| 6.2 Identification of proactive SIMs and of ME support ..... | 17 |
| 6.3 General procedure.....                                   | 17 |
| 6.4 Proactive SIM commands and procedures.....               | 18 |
| 6.4.1 DISPLAY TEXT.....                                      | 18 |
| 6.4.2 GET INKEY .....                                        | 19 |
| 6.4.3 GET INPUT .....                                        | 19 |
| 6.4.4 MORE TIME .....                                        | 20 |
| 6.4.5 PLAY TONE.....                                         | 20 |
| 6.4.6 POLL INTERVAL.....                                     | 21 |
| 6.4.7 REFRESH .....                                          | 21 |
| 6.4.8 SET UP MENU.....                                       | 22 |
| 6.4.9 SELECT ITEM .....                                      | 23 |
| 6.4.10 SEND SHORT MESSAGE.....                               | 23 |
| 6.4.11 SEND SS.....                                          | 24 |
| 6.4.12 SEND USSD .....                                       | 25 |
| 6.4.13 SET UP CALL .....                                     | 26 |
| 6.4.14 POLLING OFF .....                                     | 27 |
| 6.4.15 PROVIDE LOCAL INFORMATION.....                        | 28 |
| 6.4.16 SET UP EVENT LIST.....                                | 28 |
| 6.5 Common elements in proactive SIM commands.....           | 28 |
| 6.5.1 Command number .....                                   | 28 |
| 6.5.2 Device identities.....                                 | 29 |
| 6.5.3 Alpha identifier .....                                 | 29 |
| 6.6 Structure of proactive SIM commands.....                 | 29 |
| 6.6.1 DISPLAY TEXT.....                                      | 29 |
| 6.6.2 GET INKEY .....                                        | 29 |
| 6.6.3 GET INPUT .....                                        | 29 |
| 6.6.4 MORE TIME .....                                        | 30 |
| 6.6.5 PLAY TONE.....                                         | 30 |

|        |                                                                 |    |
|--------|-----------------------------------------------------------------|----|
| 6.6.6  | POLL INTERVAL.....                                              | 30 |
| 6.6.7  | SET-UP MENU .....                                               | 31 |
| 6.6.8  | SELECT ITEM .....                                               | 31 |
| 6.6.9  | SEND SHORT MESSAGE.....                                         | 32 |
| 6.6.10 | SEND SS.....                                                    | 32 |
| 6.6.11 | SEND USSD .....                                                 | 32 |
| 6.6.12 | SET UP CALL .....                                               | 32 |
| 6.6.13 | REFRESH .....                                                   | 33 |
| 6.6.14 | POLLING OFF .....                                               | 33 |
| 6.6.15 | PROVIDE LOCAL INFORMATION.....                                  | 33 |
| 6.6.16 | SET UP EVENT LIST.....                                          | 33 |
| 6.7    | Command results .....                                           | 33 |
| 6.8    | Structure of TERMINAL RESPONSE .....                            | 35 |
| 6.9    | Proactive SIM session and ME display interaction.....           | 37 |
| 6.10   | Handling of unknown, unforeseen and erroneous messages .....    | 37 |
| 6.10.1 | General.....                                                    | 37 |
| 6.10.2 | Message too short.....                                          | 37 |
| 6.10.3 | Missing minimum information .....                               | 37 |
| 6.10.4 | Unknown Tag value .....                                         | 37 |
| 6.10.5 | Unexpected Tag value .....                                      | 38 |
| 6.10.6 | Length errors .....                                             | 38 |
| 6.10.7 | Contents not understood.....                                    | 38 |
| 6.10.8 | Extended length data objects.....                               | 38 |
| 6.11   | Proactive commands versus possible Terminal response.....       | 39 |
| 7      | Data download to SIM .....                                      | 40 |
| 7.1    | SMS-PP data download .....                                      | 40 |
| 7.1.1  | Procedure .....                                                 | 40 |
| 7.1.2  | Structure of ENVELOPE (SMS-PP DOWNLOAD).....                    | 40 |
| 7.2    | Cell Broadcast data download .....                              | 41 |
| 7.2.1  | Procedure .....                                                 | 41 |
| 7.2.2  | Structure of ENVELOPE (CELL BROADCAST DOWNLOAD).....            | 41 |
| 8      | Menu Selection .....                                            | 41 |
| 8.1    | Procedure.....                                                  | 42 |
| 8.2    | Structure of ENVELOPE (MENU SELECTION).....                     | 42 |
| 9      | Call Control by SIM.....                                        | 42 |
| 9.1    | Procedure for mobile originated calls .....                     | 42 |
| 9.2    | Procedure for Supplementary Services and USSD .....             | 43 |
| 9.3    | Indication to be given to the user .....                        | 44 |
| 9.4    | Interaction with Fixed Dialling Number .....                    | 45 |
| 9.5    | Support of Barred Dialling Number (BDN) service .....           | 45 |
| 9.6    | Structure of ENVELOPE (CALL CONTROL) .....                      | 45 |
| 10     | MO Short Message Control by SIM .....                           | 47 |
| 10.1   | Description.....                                                | 47 |
| 10.2   | Structure of ENVELOPE (MO SHORT MESSAGE CONTROL).....           | 47 |
| 10.3   | Indication to be given to the user .....                        | 48 |
| 11     | Event download.....                                             | 49 |
| 11.1   | MT call event.....                                              | 49 |
| 11.1.1 | Procedure .....                                                 | 49 |
| 11.1.2 | Structure of ENVELOPE (EVENT DOWNLOAD - MT call) .....          | 49 |
| 11.2   | Call connected event.....                                       | 50 |
| 11.2.1 | Procedure .....                                                 | 50 |
| 11.2.2 | Structure of ENVELOPE (EVENT DOWNLOAD - call connected) .....   | 50 |
| 11.3   | Call disconnected event .....                                   | 51 |
| 11.3.1 | Procedure .....                                                 | 51 |
| 11.3.2 | Structure of ENVELOPE (EVENT DOWNLOAD - Call disconnected)..... | 51 |
| 11.4   | Location status event.....                                      | 52 |
| 11.4.1 | Procedure .....                                                 | 52 |

|         |                                                                                 |    |
|---------|---------------------------------------------------------------------------------|----|
| 11.4.2  | Structure of ENVELOPE (EVENT DOWNLOAD - Location status) .....                  | 52 |
| 11.5    | User activity event .....                                                       | 52 |
| 11.5.1  | Procedure .....                                                                 | 52 |
| 11.5.2  | Structure of ENVELOPE (EVENT DOWNLOAD - User activity) .....                    | 52 |
| 11.6    | Idle screen available event .....                                               | 53 |
| 11.6.1  | Procedure .....                                                                 | 53 |
| 11.6.2  | Structure of ENVELOPE (EVENT DOWNLOAD - Idle screen available) .....            | 53 |
| 12      | SIMPLE-TLV data objects .....                                                   | 54 |
| 12.1    | Address .....                                                                   | 54 |
| 12.2    | Alpha identifier .....                                                          | 54 |
| 12.3    | Called party subaddress .....                                                   | 54 |
| 12.4    | Capability configuration parameters .....                                       | 55 |
| 12.5    | Cell Broadcast Page .....                                                       | 55 |
| 12.6    | Command details .....                                                           | 55 |
| 12.7    | Device identities .....                                                         | 57 |
| 12.8    | Duration .....                                                                  | 57 |
| 12.9    | Item .....                                                                      | 58 |
| 12.10   | Item identifier .....                                                           | 58 |
| 12.11   | Response length .....                                                           | 58 |
| 12.12   | Result .....                                                                    | 59 |
| 12.12.1 | Additional information for SEND SS .....                                        | 60 |
| 12.12.2 | Additional information for ME problem .....                                     | 60 |
| 12.12.3 | Additional information for network problem .....                                | 60 |
| 12.12.4 | Additional information for SS problem .....                                     | 60 |
| 12.12.5 | Additional information for SMS problem .....                                    | 60 |
| 12.12.6 | Not used .....                                                                  | 60 |
| 12.12.7 | Additional information for USSD problem .....                                   | 60 |
| 12.12.8 | Additional information for interaction with call control or MO SM control ..... | 61 |
| 12.13   | SMS TPDU .....                                                                  | 61 |
| 12.14   | SS string .....                                                                 | 61 |
| 12.15   | Text string .....                                                               | 61 |
| 12.15.1 | Coding of text in unpacked format .....                                         | 62 |
| 12.15.2 | Coding of text in packed format .....                                           | 62 |
| 12.15.3 | Coding of text in 16 bits UCS2 alphabet format .....                            | 62 |
| 12.16   | Tone .....                                                                      | 62 |
| 12.17   | USSD string .....                                                               | 63 |
| 12.18   | File List .....                                                                 | 63 |
| 12.19   | LOCATION INFORMATION .....                                                      | 63 |
| 12.20   | IMEI .....                                                                      | 64 |
| 12.21   | Help Request .....                                                              | 64 |
| 12.22   | Network Measurement Results .....                                               | 64 |
| 12.23   | Default Text .....                                                              | 64 |
| 12.24   | Items Next Action Indicator .....                                               | 64 |
| 12.25   | Event list .....                                                                | 65 |
| 12.26   | Cause .....                                                                     | 65 |
| 12.27   | Location status .....                                                           | 65 |
| 12.28   | Transaction identifier .....                                                    | 66 |
| 12.29   | BCCH channel list .....                                                         | 66 |
| 12.30   | Call control requested action .....                                             | 66 |
| 13      | Tag values .....                                                                | 67 |
| 13.1    | BER-TLV tags in ME to SIM direction .....                                       | 67 |
| 13.2    | BER-TLV tags in SIM TO ME direction .....                                       | 67 |
| 13.3    | SIMPLE-TLV tags in both directions .....                                        | 67 |
| 13.4    | Type of Command and Next Action Indicator .....                                 | 68 |

|                               |                                                                     |           |
|-------------------------------|---------------------------------------------------------------------|-----------|
| 14                            | Allowed Type of command and Device identity combinations.....       | 69        |
| 15                            | Security requirements .....                                         | 70        |
| <b>Annex A (normative):</b>   | <b>Support of SIM Application Toolkit by Mobile Equipment .....</b> | <b>71</b> |
| <b>Annex B (informative):</b> | <b>Example command sequences for proactive SIM .....</b>            | <b>72</b> |
| <b>Annex C (informative):</b> | <b>Example of DISPLAY TEXT Proactive SIM Command .....</b>          | <b>75</b> |
| <b>Annex D (normative):</b>   | <b>Structure of SIM Application Toolkit communications .....</b>    | <b>76</b> |
| <b>Annex E (informative):</b> | <b>ME display in proactive SIM session.....</b>                     | <b>77</b> |
| <b>Annex F (informative):</b> | <b>Help information feature processing .....</b>                    | <b>78</b> |
| <b>Annex G (informative):</b> | <b>Monitoring of events .....</b>                                   | <b>79</b> |
| <b>Annex H (informative):</b> | <b>Change history .....</b>                                         | <b>80</b> |
| History .....                 |                                                                     | 82        |

---

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in SR 000 314: "*Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards*", which is available **free of charge** from the ETSI Secretariat. Latest updates are available on the ETSI Web server (<http://www.etsi.org/ipr>).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

---

## Foreword

This Technical Specification (TS) has been produced by the Special Mobile Group (SMG) of the European Telecommunications Standards Institute (ETSI).

This TS defines the interface between the Subscriber Identity Module (SIM) and the Mobile Equipment (ME) within the digital cellular telecommunications system.

The contents of this TS are subject to continuing work within SMG and may change following formal SMG approval. Should SMG modify the contents of this TS it will then be republished by ETSI with an identifying change of release date and an increase in version number as follows:

Version 6.x.y

where:

- 6 indicates GSM Phase 2+ Release 1997
- x the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc
- y the third digit is incremented when editorial only changes have been incorporated in the specification;

---

## Introduction

The present document includes some features which are new to this release 97 version GSM 11.14. In order to make it easier for readers of this document to find these new features compared to the release 96 version, special markers are used in the text. The following table lists all the new release 97 features and the corresponding marker for each feature.

| Feature                                                                                                                                   | Release | Marker            |
|-------------------------------------------------------------------------------------------------------------------------------------------|---------|-------------------|
| Help information facility                                                                                                                 | 1997    | \$(HelpInfo)\$    |
| Extended Results                                                                                                                          | 1997    | \$(ExtdRes)\$     |
| Network Measurement Results included in PROVIDE LOCAL INFORMATION                                                                         | 1997    | \$(NMR)\$         |
| Default Choice for GET INPUT command                                                                                                      | 1997    | \$(DefChoice)\$   |
| Items next action indication                                                                                                              | 1997    | \$(NextAction)\$  |
| Cell identity in Call Control by SIM                                                                                                      | 1997    | \$(CellidCC)\$    |
| SEND USSD command                                                                                                                         | 1997    | \$(SendUSSD)\$    |
| MO short message control by SIM                                                                                                           | 1997    | \$(MOSMcontrol)\$ |
| Indication to be given to the user                                                                                                        | 1997    | \$(Indication)\$  |
| Default selected item                                                                                                                     | 1997    | \$(DefItem)\$     |
| Event driven information                                                                                                                  | 1997    | \$(Event)\$       |
| Universal two byte coded Character Set                                                                                                    | 1997    | \$(UCS2)\$        |
| New status words for handling of SIM data download error                                                                                  | 1997    | \$(DDLerror)\$    |
| Handling of TERMINAL RESPONSE in case of interaction between proactive commands and CALL CONTROL by SIM / MO short message control by SIM | 1997    | \$(TRCC)\$        |

---

# 1 Scope

The present document defines the interface between the Subscriber Identity Module (SIM) and the Mobile Equipment (ME), and mandatory ME procedures, specifically for "SIM Application Toolkit".

SIM Application Toolkit is a set of commands and procedures for use during the network operation phase of GSM, in addition to those defined in GSM 11.11 [14].

Specifying the interface is to ensure interoperability between a SIM and an ME independently of the respective manufacturers and operators. The concept of a split of the Mobile Station (MS) into these elements as well as the distinction between the GSM network operation phase, which is also called GSM operations, and the administrative management phase are described in GSM 02.17 [3].

The present document defines:

- the commands;
- the application protocol;
- the mandatory requirements on the SIM and ME for each procedure.

Unless otherwise stated, references to GSM also apply to DCS 1800.

This standard does not specify any aspects related to the administrative management phase. Any internal technical realization of either the SIM or the ME are only specified where these reflect over the interface. This standard does not specify any of the security algorithms which may be used.

This Technical Specification defines an enhancement for GSM Phase 2+ of the SIM/ME interface for GSM Phase 2. While all attempts have been made to maintain phase compatibility, any issues that specifically relate to Phase 1 should be referenced from within the relevant Phase 1 specification.

---

# 2 Normative references

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.
- A non-specific reference to an ETS shall also be taken to refer to later versions published as an EN with the same number.

- [1] GSM 01.02: "Digital cellular telecommunications system (Phase 2+); General description of a GSM Public Land Mobile Network (PLMN)".
- [2] GSM 01.04: "Digital cellular telecommunications system (Phase 2+); Abbreviations and acronyms".
- [3] GSM 02.17: "Digital cellular telecommunications system (Phase 2+); Subscriber Identity Modules (SIM) Functional characteristics".
- [4] GSM 02.30: "Digital cellular telecommunications system (Phase 2+); Man-Machine Interface (MMI) of the Mobile Station (MS)".
- [5] GSM 03.38: "Digital cellular telecommunications system (Phase 2+); Alphabets and language-specific information".
- [6] GSM 03.40: "Digital cellular telecommunications system (Phase 2+); Technical realization of the Short Message Service (SMS) Point-to-Point (PP)".

- [7] GSM 03.41: "Digital cellular telecommunications system (Phase 2+); Technical realization of Short Message Service Cell Broadcast (SMSCB)".
- [8] GSM 04.08: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 specification".
- [9] GSM 04.11: "Digital cellular telecommunications system (Phase 2+); Point-to-Point (PP) Short Message Service (SMS) support on mobile radio interface".
- [10] GSM 04.80: "Digital cellular telecommunications system (Phase 2+); Mobile radio interface layer 3 supplementary services specification; Formats and coding".
- [11] GSM 04.90: "Digital cellular telecommunications system (Phase 2+); Unstructured Supplementary Service Data (USSD) - Stage 3".
- [12] GSM 07.05: "Digital cellular telecommunications system (Phase 2+); Use of Data Terminal Equipment - Data Circuit terminating Equipment (DTE - DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)".
- [13] GSM 09.91: "Digital cellular telecommunications system; Interworking aspects of the Subscriber Identity Module - Mobile Equipment (SIM - ME) interface between Phase 1 and Phase 2".
- [14] GSM 11.11 (ETS 100 608): "Digital cellular telecommunications system (Phase 2); Specification of the Subscriber Identity Module - Mobile Equipment (SIM - ME) interface"
- [15] CCITT Recommendation E.164: "Numbering plan for the ISDN era".
- [16] ISO/IEC 7816-3 (1989): "Identification cards - Integrated circuit(s) cards with contacts, Part 3: Electronic signals and transmission protocols".
- [17] ISO/IEC 7816-6 (1995): "Identification cards - Integrated circuit(s) cards with contacts, Part 6 Inter-industry data elements".
- [18] GSM 02.40: "Digital cellular telecommunications system (Phase 2); Procedures for call progress indications".
- [19] GSM 02.07: "Digital cellular telecommunications system (Phase 2+); Mobile Stations (MS) features".
- [20] GSM 11.11: "Digital cellular telecommunications system (Phase 2+); Specification of the Subscriber Identity Module - Mobile Equipment (SIM - ME) interface".
- [21] GSM 11.12: "Digital cellular telecommunications system (Phase 2); Specification of the 3 Volt Subscriber Identity Module - Mobile Equipment (SIM - ME) interface".
- [22] GSM 03.22 (ETS 300 930): "Digital cellular telecommunications system (Phase 2+); Functions related to Mobile Station (MS) in idle mode".
- [23] GSM 04.07 (ETS 300 939): "Digital cellular telecommunications system (Phase 2+); Mobile radio interface signalling layer 3; General aspects".
- [24] GSM 03.48: "Digital cellular telecommunications system (Phase 2+); Security Mechanisms for the SIM application toolkit "

## 3 Definitions, abbreviations and symbols

### 3.1 Definitions

For the purposes of the present document, the following definitions apply. For further information and definitions refer to GSM 01.02 [1].

**application:** An application consists of a set of security mechanisms, files, data and protocols (excluding transmission protocols).

**application protocol:** The set of procedures required by the application.

**card session:** A link between the card and the external world starting with the ATR and ending with a subsequent reset or a deactivation of the card.

**data object:** Information seen at the interface for which are defined a tag (identifier), a length and a value. Data objects can be either BER-TLV (objects that conform to the Basic Encoding Rules of ASN.1) or SIMPLE-TLV. In this specification, all BER-TLV data objects are "primitive": the value part consists only of SIMPLE-TLV data objects.

**padding:** One or more bits appended to a message in order to cause the message to contain the required number of bits or bytes.

**proactive SIM:** A SIM which is capable of issuing commands to the ME within the T=0 protocol.

**proactive SIM session:** Sequence of related SIM application toolkit commands and responses. A proactive SIM session starts with the status response '91 xx' (proactive command pending) and ends with a status response of '90 00' (normal ending of command) after Terminal Response.

**SIM application session:** The execution of a sequence of commands internal to the SIM that can result in the performance of one or several proactive SIM sessions. The SIM application session can be started by any event in the card session, and can execute for the duration of the card session. Processing of the SIM application session will not interfere with normal GSM operation.

**SIM Application Toolkit:** A set of applications and related procedures which may be used during a GSM session.

### 3.2 Abbreviations

For the purpose of the present document, the following abbreviations apply, in addition to those listed in GSM 01.04 [2]:

|      |                                                                               |
|------|-------------------------------------------------------------------------------|
| A3   | Algorithm 3, authentication algorithm; used for authenticating the subscriber |
| A5   | Algorithm 5, cipher algorithm; used for enciphering/deciphering data          |
| A8   | Algorithm 8, cipher key generator; used to generate $K_c$                     |
| A38  | A single algorithm performing the functions of A3 and A8                      |
| ADN  | Abbreviated Dialling Number                                                   |
| APDU | Application Protocol Data Unit                                                |
| BCD  | Binary Coded Decimal                                                          |
| BDN  | Barred Dialling Number                                                        |
| BER  | Basic Encoding Rules of ASN.1                                                 |
| CB   | Cell Broadcast                                                                |
| CBMI | Cell Broadcast Message Identifier                                             |
| CCP  | Capability/Configuration Parameter                                            |
| DCS  | Digital Cellular System                                                       |
| DTMF | Dual Tone Multiple Frequency                                                  |
| EF   | Elementary File                                                               |
| ETSI | European Telecommunications Standards Institute                               |
| etu  | elementary time unit                                                          |
| FDN  | Fixed Dialling Number                                                         |
| GSM  | Global System for Mobile communications                                       |
| ID   | IDentifier                                                                    |

|         |                                                                                                                             |
|---------|-----------------------------------------------------------------------------------------------------------------------------|
| IEC     | International Electrotechnical Commission                                                                                   |
| IMEI    | International Mobile Equipment Identity                                                                                     |
| IMSI    | International Mobile Subscriber Identity                                                                                    |
| ISO     | International Organization for Standardization                                                                              |
| Kc      | Cryptographic key; used by the cipher A5                                                                                    |
| Ki      | Subscriber authentication key; the cryptographic key used by the authentication algorithm, A3, and cipher key generator, A8 |
| lgth    | The (specific) length of a data unit                                                                                        |
| LND     | Last Number Dialed                                                                                                          |
| ME      | Mobile Equipment                                                                                                            |
| MMI     | Man Machine Interface                                                                                                       |
| MS      | Mobile Station                                                                                                              |
| NMR     | Network Measurement Results (see also GSM 04.08 [8])                                                                        |
| NPI     | Numbering Plan Identifier                                                                                                   |
| RAND    | A RANDom challenge issued by the network                                                                                    |
| RFU     | Reserved for Future Use                                                                                                     |
| SIM     | Subscriber Identity Module                                                                                                  |
| SMS     | Short Message Service                                                                                                       |
| SRES    | Signed RESponse calculated by a SIM                                                                                         |
| SS      | Supplementary Service                                                                                                       |
| SSC     | Supplementary Service Control string                                                                                        |
| SW1/SW2 | Status Word 1 / Status Word 2                                                                                               |
| TLV     | Tag, length, value.                                                                                                         |
| TON     | Type Of Number                                                                                                              |
| TP      | Transfer layer Protocol                                                                                                     |
| TS      | Technical Specification                                                                                                     |
| UCS2    | Universal two byte coded Character Set                                                                                      |
| USSD    | Unstructured Supplementary Service Data                                                                                     |

### 3.3 Symbols

'0' to '9' and 'A' to 'F' The sixteen hexadecimal digits.

\$(CellidCC)\$ This marker denotes that text in the relevant subclause contains references to a release 97 feature. See the introduction for further information.

\$(Event)\$ see above.

\$(ExtdRes)\$ see above.

\$(DDLerror)\$ see above.

\$(DefItem)\$ see above.

\$(DefChoice)\$ see above.

\$(HelpInfo)\$ see above.

\$(Indication)\$ see above.

\$(MOSMcontrol)\$ see above.

\$(NextAction)\$ see above.

\$(NMR)\$ see above.

\$(SendUSSD)\$ see above.

\$(TRCC)\$ see above.

\$(UCS2)\$ see above

---

## 4 Overview of SIM Application Toolkit

The SIM Application Toolkit provides mechanisms which allow applications, existing in the SIM, to interact and operate with any ME which supports the specific mechanism(s) required by the application.

The following mechanisms have been defined. These mechanisms are dependent upon the commands and protocols relevant to SIM Application Toolkit in GSM 11.11 [20].

## 4.1 Profile Download

Profile downloading provides a mechanism for the ME to tell the SIM what it is capable of. The ME knows what the SIM is capable of through the SIM Service Table and EF<sub>PHASE</sub>.

## 4.2 Proactive SIM

Proactive SIM gives a mechanism whereby the SIM can initiate actions to be taken by the ME. These actions include:

- display text from the SIM to the ME;
- send a short message;
- set up a voice call to a number held by the SIM;
- set up a data call to a number and bearer capabilities held by the SIM;
- send a SS control or USSD string;
- play tone in earpiece;
- initiate a dialogue with the user;
- SIM initialization request and notification of changes to EF(s);
- provide local information from the ME to the SIM.

If \$(HelpInfo)\$ is supported, then for each command involved in the dialog with the user, a help information may be available, either for each item of a list of items proposed to the user, or with each command requesting a response from the user. If a proactive command involved in the dialog with the user indicates the availability of the help feature, the support of this feature is optional for the ME.

## 4.3 Data download to SIM

Data downloading to the SIM uses the transport mechanisms of SMS point-to-point and Cell Broadcast. Transferral of information over the SIM-ME interface uses the ENVELOPE command.

## 4.4 Menu selection

A set of possible menu entries is supplied by the SIM in a proactive SIM command. The menu selection mechanism is used to transfer the SIM application menu item which has been selected by the user to the SIM. If \$(HelpInfo)\$ is supported, the menu selection mechanism may also be used for requesting help information on the items of the SIM application menu.

## 4.5 Call control by SIM

When this service is activated by the SIM, all dialled digit strings, supplementary service control strings and USSD strings are first passed to the SIM before the ME sets up the call, the supplementary service operation or the USSD operation. If \$(CellidCC)\$ is supported, the ME shall also pass to the SIM at the same time its current serving cell. The SIM has the ability to allow, bar or modify the call, the supplementary service operation or the USSD operation. The SIM also has the ability to replace a call request, a supplementary service operation or a USSD operation by another call request or supplementary service operation or USSD operation. For example, a call request can be replaced by a supplementary service operation or a USSD operation, and vice-versa.

## 4.6 MO Short Message control by SIM

This subclause applies to the release 97 feature, \$(MOSMcontrol)\$.

When this service is activated by the SIM, all MO short messages are first passed to the SIM before the ME sends the short message. The ME shall also pass to the SIM at the same time its current serving cell. The SIM shall have the ability to allow the sending, bar the sending or modify the destination address of the short message before sending it.

## 4.7 Event download

This subclause applies to the release 97 feature, \$(Event)\$.

A set of events to monitor for is supplied by the SIM in a proactive SIM command. The event download mechanism is used to transfer details of the event to the SIM, when it occurs. Events that the ME can report to the SIM include incoming calls, location status, and availability of the screen for applications.

## 4.8 Security

Applications designed using the features in this specification may require methods to ensure data confidentiality, data integrity, and data sender validation, or any subset of these. Requirements for these mechanisms are defined in clause 15.

# 5 Profile download

## 5.1 Procedure

The profile download instruction is sent by the ME to the SIM as part of the SIM initialization procedure. This procedure is specified in GSM 11.11 [14]. In this procedure, the ME reads EF<sub>PHASE</sub>. If EF<sub>PHASE</sub> indicates that the SIM requires the ME to perform the profile download procedure, then the ME shall, after having performed the CHV1 verification procedure and before selecting EF<sub>IMSI</sub> or EF<sub>LOCAL</sub>, send the TERMINAL PROFILE command, as specified below, to the SIM. The profile sent by the ME shall state the facilities relevant to SIM Application Toolkit that are supported by the ME.

This procedure is important, as it is by this that the SIM knows what the ME is capable of, and the SIM can then limit its instruction range accordingly. If no command is sent by the ME, the SIM shall assume that the ME does not support SIM Application Toolkit.

## 5.2 Structure and coding of TERMINAL PROFILE

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description | Section | M/O | Length |
|-------------|---------|-----|--------|
| Profile     | -       | M   | lgth   |

- Profile:

Contents: The list of SIM Application Toolkit facilities that are supported by the ME.


Coding:

1 bit is used to code each facility:

bit = 1: facility supported by ME


bit = 0: facility not supported by ME

First byte (Download):

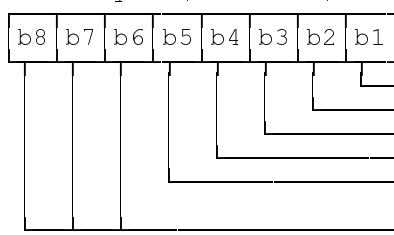


Profile download  
 SMS-PP data download  
 Cell Broadcast data download  
 Menu selection  
 new status words for SIM data download error  
 if \$(DDLerror)\$ is supported  
 RFU, bit = 0


Second byte (Other):

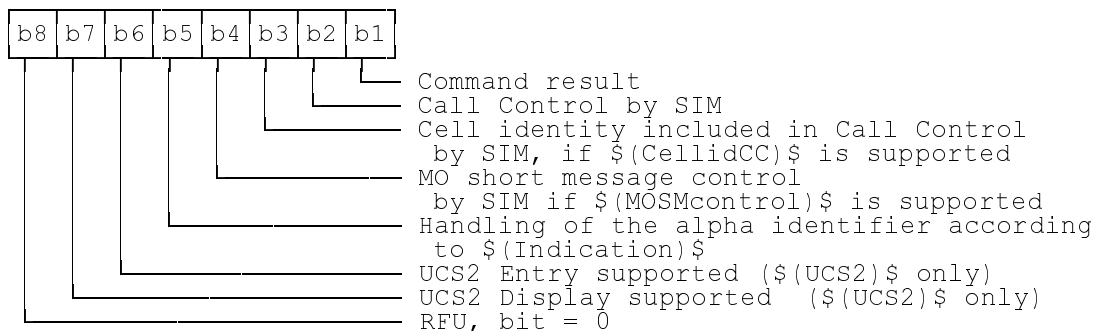


Third byte (Proactive SIM):

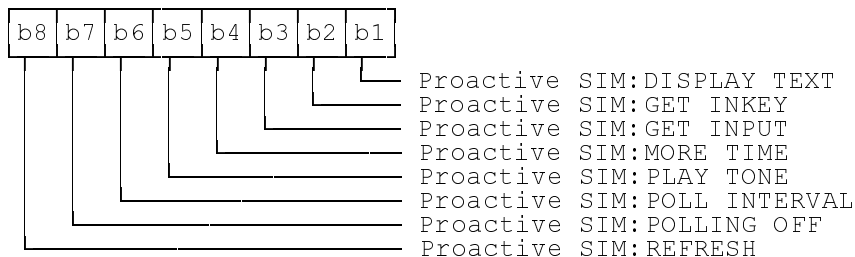


Fourth byte (Proactive SIM):

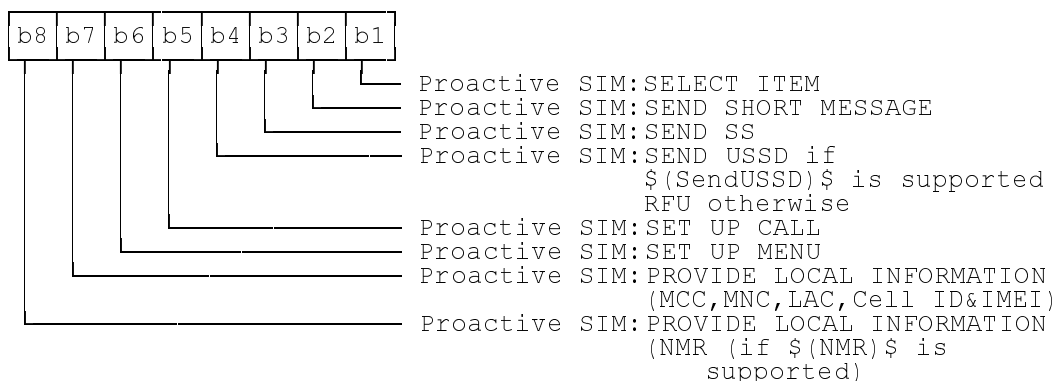

Fifth byte (Event driven information): (if \$(Event)\$ is supported)

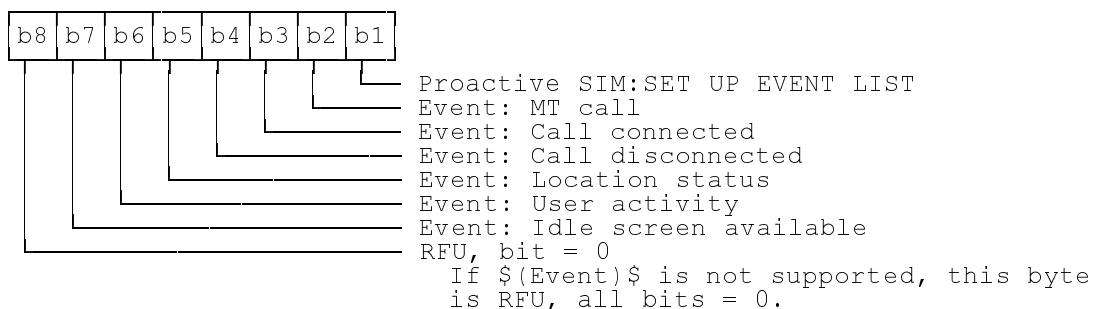

Subsequent bytes:



RFU bits, and all bits of subsequent bytes, are reserved to indicate future facilities. A SIM supporting only the features of SIM Application Toolkit defined here shall not check the value of RFU bits.

Response parameters/data: None.

---

## 6 Proactive SIM

### 6.1 Introduction

GSM 11.11 [14] defines that the ME communicates to the SIM using the T=0 protocol, which is specified in ISO/IEC 7816-3 [16]. The ME is always the "master" and initiates commands to the SIM, and therefore there is no mechanism for the SIM to initiate a communication with the ME. This limits the possibility of introducing new SIM features requiring the support of the ME, as the ME needs to know in advance what actions it should take.

The proactive SIM service provides a mechanism which stays within the protocol of T=0, but adds a new status response word SW1. This status response has the same meaning as the normal ending ('90 00'), and can be used with most of the commands that allow the normal ending, but it also allows the SIM to say to the ME "I have some information to send to you". The ME then uses the FETCH function to find out what this information is.

To avoid cross-phase compatibility problems, these functions shall only be used between a proactive SIM and an ME that supports the proactive SIM feature.

The SIM can issue a variety of commands through this mechanism, given in alphabetical order:

- **DISPLAY TEXT**, which displays text on screen (no more than 160 characters). A high priority is available, to replace anything else on screen.
- **GET INKEY**, which sends text to the display and requests a single character response in return. It is intended to allow a dialogue between the SIM and the user, particularly for selecting an option from a menu.
- **GET INPUT**, which sends text to the display and requests a response in return. It is intended to allow a dialogue between the SIM and the user.
- **MORE TIME**, which does not request any action from the ME. The ME is required to respond with TERMINAL RESPONSE (OK) as normal - see below. The purpose of the MORE TIME command is to provide a mechanism for the SIM Application Toolkit task in the SIM to request more processing time.
- **PLAY TONE**, which requests the ME to play a tone in its earpiece, ringer, or other appropriate loudspeaker.
- **POLL INTERVAL**, which negotiates how often the ME sends STATUS commands to the SIM during idle mode. Polling is disabled with POLLING OFF. Use of STATUS for the proactive SIM is described in GSM 11.11 [14].
- **PROVIDE LOCAL INFORMATION** which requests the ME to pass local information to the SIM, for example the mobile country and network codes (MCC + MNC) of the network on which the user is registered.
- **REFRESH**, which requests the ME to carry out a SIM initialization according to GSM 11.11 subclause 12.2.1, and/or advises the ME that the contents or structure of EFs on the SIM have been changed. The command also makes it possible to restart a card session by resetting the SIM.
- **SELECT ITEM**, where the SIM supplies a list of items, and the user is expected to choose one. The ME presents the list in an implementation-dependent way.
- **SEND SHORT MESSAGE**, which sends a short message or SMS-COMMAND to the network.
- **SEND SS**, which sends a SS request to the network.
- **SEND USSD**, which, if \$(SendUSSD)\$ is supported, sends a USSD string to the network.
- **SET UP CALL**, of which there are three types:
  - set up a call, but only if not currently busy on another call;
  - set up a call, putting all other calls (if any) on hold;
  - set up a call, disconnecting all other calls (if any);
- **SET UP EVENT LIST** (if \$(Event)\$ is supported), where the SIM supplies a list of events which it wants the ME to provide details of when these events happen.

- **SET UP MENU**, where the SIM supplies a list of items to be incorporated into the ME's menu structure.

The ME tells the SIM if the command was successful or not using the command result procedure defined in subclause 6.7. Responsibility for what happens after that (whether to repeat the command, try another one immediately, try again sometime later, or not to try again at all) lies with the SIM application. However, the SIM application needs to know why the command failed, so the ME provides the SIM with the result of the command.

Results are grouped into three main types:

- OK.
- Temporary problem. These results are further broken down into types of temporary problems, and specific causes. Generally, they indicate to the SIM that it may be worth trying again.
- Permanent problem. These results are again further broken down into types of permanent problems, and specific causes. Generally, they indicate to the SIM that it is not worth trying again during this GSM session.

If the SIM issues an instruction to the ME to initiate a Mobile Originated transaction (e.g. SEND SMS, SEND USSD), then unless explicitly stated elsewhere in the present document or in GSM 11.11 [14], the content supplied by the SIM for onward transmission by the ME shall not be altered by the ME.

## 6.2 Identification of proactive SIMs and of ME support

A proactive SIM shall be identified by having the proactive SIM service activated in the SIM Service Table (see GSM 11.11 [14]). An ME that supports proactive SIMs shall be identified as such when it sends a **TERMINAL PROFILE** command during SIM initialization. The ME shall then send **STATUS** commands to the SIM at intervals determined by the poll interval procedure (see subclause 6.4.6).

A proactive SIM shall not send any command requests (status bytes SW1 SW2 = '91 XX') to a mobile that does not support the proactive SIM feature.

An ME that supports the proactive SIM feature shall not send proactive SIM related commands to a SIM that does not have the proactive SIM service activated.

## 6.3 General procedure

For all of the procedures that can end in '90 00' (indicating normal ending to the command), and which cannot end in '9F XX' (response data available from SIM), a proactive SIM operating with an ME that supports proactive SIMs may instead use the status response '91 XX'.

The response code '91 XX' shall indicate to the ME that the previous command has been successfully executed by the SIM in the same way as '90 00' (i.e. "OK"), but additionally it shall indicate response data which contains a command from the SIM for a particular ME procedure (defined in subclause 6.4).

The value 'XX' indicates the length of the response data. The ME shall use the **FETCH** command to obtain this data.

It is the responsibility of the SIM to remind the ME of a pending proactive command by applying the '91 XX' returncode until it is fetched by the ME.

**Note:** The last value of 'XX' received in a '91 XX' returncode from the SIM should be used by the ME in a following **FETCH** command.

It is recommended that the ME interprets a '90 00' following a '91 XX' without a corresponding **FETCH** as if no proactive command is available in the SIM and regard the proactive SIM session as being terminated. However, the SIM should be able to handle a **FETCH** command being sent in this case, e.g. by applying the appropriate error handling (cf. "Handling of unknown, unforeseen and erroneous messages").

GSM 11.11 [20] shows how the SIM can initiate a proactive command in each of the five cases of transmission protocol identified in GSM 11.11 [14]. Some commands require the SIM to indicate that it has response data for the ME (through SW1/SW2 = '9F XX'), and the ME gets this data using the **GET RESPONSE** command.

When the ME has received a command from the SIM, it shall attempt to process the command immediately.

- If the command has been successfully executed, the ME shall inform the SIM as soon as possible, using TERMINAL RESPONSE.
- If the command was not successfully executed, the ME shall inform the SIM as soon as possible using TERMINAL RESPONSE with an error condition.

Responsibility for re-trying lies with the SIM application. The SIM application can make a judgement whether to send the same command again, to send a different one, or not to try again, from the information given by the ME in TERMINAL RESPONSE. If the SIM application wishes the ME to try again, it shall issue a new (identical) command.

Only one proactive command can be ongoing at any one time.

## 6.4 Proactive SIM commands and procedures

### 6.4.1 DISPLAY TEXT

This command instructs the ME to display a text message. It allows the SIM to define the priority of that message, and the text string format.

Two types of priority are defined:

- Display normal priority text on screen.
- Display high priority text on screen.

The text string can be in one of three formats:

- packed format in SMS default alphabet - (see 12.15.2);
- unpacked format in SMS default alphabet - (see 12.15.2);
- UCS2 alphabet format if \$(UCS2)\$ is supported - (see 12.15.3).

A flag (see command qualifier, subclause 12.6) shall be set to inform the ME whether the availability of the screen for subsequent information display after its use for 'Display Text' should be either after a short delay (the duration of the delay being at the discretion of the ME manufacturer), or following a user MMI action.

- If the user has indicated the need to end the proactive SIM application session, the ME shall send a TERMINAL RESPONSE with "Proactive SIM application session terminated by the user" result value.
- If the user has indicated the need to go backwards in the proactive SIM application session, the ME shall send a TERMINAL RESPONSE with "Backward move in the proactive SIM session requested by the user" result value.
- If \$(ExtdRes)\$ is supported and if a flag of the command qualifier (see subclause 12.6) indicates that the ME shall wait for the user to clear message and if the ME decides that no user response has been received, the ME shall send a TERMINAL RESPONSE with "No response from user" result value.
- Otherwise, the ME shall send TERMINAL RESPONSE (Command performed successfully) at the expiration of the short delay, or following a user MMI action not described above.

In each case the availability of the screen for the subsequent information display is defined in subclause 6.9.

NOTE: For the case where the text is cleared after a short delay, the ME may also allow the user to clear the display via the MMI prior to this.

The ME shall reject normal priority text commands if the screen is currently being used for more than its normal stand-by display. If the command is rejected, the ME informs the SIM using TERMINAL RESPONSE (ME currently unable to process command - screen busy).

High priority text shall be displayed on the screen immediately, except if there is a conflict of priority level of alerting such as incoming calls or a low battery warning. In that situation, the resolution is left to the ME. If the command is rejected in spite of the high priority, the ME shall inform the SIM using TERMINAL RESPONSE (ME currently unable to process command - screen is busy).

If \$(HelpInfo)\$ is supported and help information is requested by the user, this command may be used to display help information on the screen. The help information should be sent as high priority text and with the option that it should be cleared after a short delay.

## 6.4.2 GET INKEY

This command instructs the ME to display text, and to expect the user to enter a single character. Any response entered by the user shall be passed transparently by the ME to the SIM.

The text can be in one of three formats:

- packed format in SMS default alphabet - (see 12.15.2);
- unpacked format in SMS default alphabet - (see 12.15.2);
- UCS2 alphabet format if \$(UCS2)\$ is supported - (see 12.15.3).

The response can be from one of three character sets. This is specified by the SIM:

- digits only (0-9, \*, #, and +);
- characters from the SMS default alphabet;
- characters from the UCS2 alphabet if \$(UCS2)\$ is supported.

Upon receiving the command, the ME shall display the text. The ME shall allow the user to enter a single character in response.

- If the user has indicated the need to go backwards in the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Backward move in the proactive SIM session requested by the user" result value.
- If the user has indicated the need to end the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Proactive SIM session terminated by the user" result value.
- If the ME decides that no user response has been received, the ME shall send a TERMINAL RESPONSE with "No response from user" result value.
- If the SIM requests a digit only, the ME shall only allow the user to enter a character from the digits 0-9, \*, # and +. When the user has entered a digit, the ME shall pass the entered digit transparently to the SIM, using TERMINAL RESPONSE.
- If \$(HelpInfo)\$ is supported and help information is available for the command and if the user has indicated the need to get help information, the ME shall send a TERMINAL RESPONSE with "help information required by the user" result value.
- If the SIM requests a character from the SMS default alphabet, the ME shall allow the user to enter a character using characters from this alphabet. When the user has entered a character, the ME shall pass the entered character transparently to the SIM, using TERMINAL RESPONSE.

**NOTE:** If the MMI of the ME requires more than one keypress in order to select a character, it is an implementation decision for the ME manufacturer how to indicate completion (e.g. timeout, pressing SEND, OK). It may be useful to echo the input character on the display.

For digits only (0-9,\*,# and +) and SMS default alphabet characters sets, the response shall be coded using the SMS default alphabet in unpacked format.

## 6.4.3 GET INPUT

This command instructs the ME to display text, and that any response string entered by the user shall be passed transparently by the ME to the SIM. If \$(DefChoice)\$ is supported, and if the SIM provides a default text, the ME shall display this default text, which the user may accept, reject or edit as the response string.

The text can be in one of three formats:

- packed format in SMS default alphabet (see 12.15.2);
- unpacked format in SMS default alphabet (see 12.15.2);
- UCS2 alphabet format if \$(UCS2)\$ is supported (see 12.15.3).

The SIM indicates how many characters are expected for the response string, by giving a minimum and a maximum acceptable length.

The SIM specifies three variables for the response string it is expecting from the user:

- the response contains either digits only (0-9, \*, # and +) or characters from the SMS default alphabet;
- the response for digits only (0-9, \*, # and +) or characters from SMS default alphabet is either in an unpacked format or in a packed format;
- the ME may display the text string being entered by the user (the response), or the ME shall hide (i.e. not display) the actual text string.

The combination of characters from the SMS default alphabet and hidden entry mode is not allowed. In hidden entry mode, only digits from the set "0-9", "\*" and "#" are allowed for the user input. "+" is not allowed for user input in this mode.

If the SIM requests that the user input (text string) is to be hidden, it is permissible for the ME to indicate the entry of characters, so long as the characters themselves are not revealed.

Upon receiving the command, the ME shall display the text. The ME shall allow the user to enter characters in response.

- The ME MMI is responsible for managing the entry of the correct number of characters.
- If the user has indicated the need to go backwards in the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Backward move in the proactive SIM session requested by the user" result value.
- If the user has indicated the need to end the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Proactive SIM session terminated by the user" result value.
- If the ME decides that no user response has been received, the ME shall send a TERMINAL RESPONSE with "No response from user" result value.
- If the SIM requests digits only, the ME shall only allow the user to enter the digits 0-9, \*, # and +. When the user presses SEND (or otherwise indicates completion), the ME shall pass the entered digit string transparently to the SIM, using TERMINAL RESPONSE.
- If the SIM requests characters from the UCS2 alphabet or SMS default alphabet, the ME shall allow the user to enter a character string using characters from one of these alphabets. When the user presses SEND (or otherwise indicates completion), the ME shall pass the entered text string transparently to the SIM, using TERMINAL RESPONSE.
- If \$(HelpInfo)\$ is supported and help information is available for the command and if the user has indicated the need to get help information, the ME shall send a TERMINAL RESPONSE with 'help information required by the user' result value.

If the SIM requests the user input to be in packed format, then the ME shall pack the text according to GSM 03.38 [5] before submitting it to the SIM.

#### 6.4.4 MORE TIME

This procedure is provided to allow the SIM Application Toolkit task in the SIM more time for processing, where the processing is so long that it is in danger of affecting normal GSM operation, and clock stop prevents processing to take place in the background.

The ME shall take no extraordinary action when it receives this command, and all other operations shall be unaffected. The ME shall conclude the command by sending TERMINAL RESPONSE (OK) to the SIM, as soon as possible after receiving the MORE TIME command.

#### 6.4.5 PLAY TONE

This command instructs the ME to play an audio tone.

Upon receiving this command, the ME shall check if it is currently in, or in the process of setting up (SET-UP message sent to the network, see GSM 04.08 [8]), a speech call.

- If the ME is in, or is setting up a speech call, it shall superimpose the tone on top of the downlink audio (if any), for the duration given in the command. The progress or current state of the call shall not be affected in any way. The ME shall send the TERMINAL RESPONSE (Command performed successfully) as soon as possible after the tone has been completed and, if an alpha identifier was included and displayed, the screen is available for subsequent information display.
- If the ME is not in or setting up a speech call, it shall route the audio to the external ringer, or other appropriate audio device, and play the tone for the duration given in the command. The ME shall send the TERMINAL RESPONSE (Command performed successfully) as soon as possible after the tone has been completed and, if an alpha identifier was included and displayed, the screen is available for subsequent information display.
- If the user has indicated the need to end the proactive SIM application session while the ME plays the tone, the ME shall stop playing the tone and shall send a TERMINAL RESPONSE with "Proactive SIM application session terminated by the user" result value.
- If ME support for the specific tone requested is optional, and the ME does not support this particular tone, the ME shall inform the SIM using TERMINAL RESPONSE (Command beyond ME's capabilities).

This proactive command contains no information on how a call is progressing; therefore the ME shall not generate any verbal indication or display any text or graphical indication about the normal meaning of this tone (e.g. display "called subscriber busy"). If the SIM wishes to convey a meaning in text to the user, it shall do this through the alpha identifier data object.

If the ME is required to generate a supervisory tone due to the progress of the current call (e.g. the network sends the ME call control cause information) as defined in GSM 02.40 [18], then the call supervisory tone shall take precedence over the tone requested by the SIM.

## 6.4.6 POLL INTERVAL

This procedure negotiates how often the ME shall send STATUS commands related to Proactive Polling (defined in GSM 11.11 [20]). The SIM indicates the poll interval it requests from then onwards, and the ME responds through TERMINAL RESPONSE with the maximum interval that it will use. If the ME does not support the poll interval requested by the SIM, then the ME shall respond with the closest interval to the one requested by the SIM, or, if the intervals the ME can offer are equidistant (higher and lower) from the SIM's request, the ME shall respond with the lower interval of the two.

NOTE: Applications on the SIM should not request short time intervals for an extended period, as this will have an adverse effect on battery life.

## 6.4.7 REFRESH

The purpose of this command is to enable the ME to be notified of the changes to the SIM configuration that have occurred as the result of a SIM application activity. It is up to the SIM application to ensure that this is done correctly.

The command supports five different modes:

- SIM Initialization. This mode tells the ME to carry out SIM initialization as it is defined in GSM 11.11 subclause 12.2.1 only, starting after the CHV1 verification procedure. The ME shall not reset the SIM electrically.
- File Change Notification. This mode advises the ME of the identity of the EFs that have been changed (in structure and/or contents) in the SIM. This information can be used by the ME if there is an image of SIM EFs (e.g. the ADN file) in the ME's memory, to determine whether it needs to update this image.
- SIM Initialization and File Change Notification. This is a combination of the first two modes above.
- SIM Initialization and Full File Change Notification. This mode causes the ME to perform the SIM initialization procedure of the first mode above and advises the ME that several EFs have been changed (in structure or contents) in the SIM. If there is an image of SIM EFs in the ME's memory, the ME shall completely update this image.
- SIM Reset. This mode causes the ME to run the GSM session termination procedure and to deactivate the SIM in accordance with GSM 11.11 [20]. Subsequently, the ME activates the SIM again and starts a new card session. In

case of a 3 Volt technology ME, the ME shall restart the SIM with the same supply voltage as in the previous session, if the ME can ensure that the SIM has not been changed in between. Otherwise, the ME shall perform the supply voltage switching in accordance with GSM 11.12 [21]. The ME shall not send the TERMINAL RESPONSE; this is an exception from the normal procedure, where TERMINAL RESPONSE is sent after completion of the command. The SIM Application shall interpret a new activation of the contacts of the SIM as an implicit TERMINAL RESPONSE. The SIM Reset mode is used when a SIM application requires ATR or complete SIM initialization procedures to be performed. SIM Applications should take into account that early implementations of SIM Application Toolkit in some MEs may send a TERMINAL RESPONSE after performing the REFRESH command involving resetting the SIM electrically.

If the ME performs the REFRESH command successfully for only those EFs indicated in the mode, the ME shall inform the SIM using TERMINAL RESPONSE (OK), after it has completed its refreshing.

For REFRESH commands with mode other than "SIM Reset", it is permissible for the ME, as part of its execution of the REFRESH command, to read EFs in addition to those notified by the SIM, or to perform a SIM initialisation, provided that the procedure executed wholly encompasses the mode requested by the SIM. The ME shall not electrically reset the SIM. If the ME does the refreshing successfully, it shall inform the SIM using TERMINAL RESPONSE (Refresh performed with additional EFs read), after the ME has completed its refreshing. It should be noted that reading additional EFs will lengthen the refresh procedure.

If the ME receives a REFRESH command while in a state where execution of the command would be unacceptable, upsetting the current user operation (e.g. notification during a call that the IMSI has changed), the ME shall inform the SIM using TERMINAL RESPONSE (ME currently unable to process command - currently busy on call) or TERMINAL RESPONSE (ME currently unable to process command - screen is busy) as appropriate.

NOTE 1: Many MEs copy an image of the SIM's memory to the ME at initialization to speed up access to these fields during a GSM session. One of the purposes of this coding of the REFRESH command is to enable MEs to change such an image efficiently.

If, on receipt of the REFRESH command, the ME replies that it is busy (e.g. in call or navigating menus), the toolkit application may shorten the polling interval utilising the POLL INTERVAL command in order to resend the REFRESH command more frequently.

It is recommended for the ME to minimise the use of sending temporary problem TERMINAL RESPONSE, as during the period between the SIM issuing a REFRESH command and the ME performing the refresh procedure, there may be inconsistencies between data held in the ME and in the SIM. However, responsibility for retrying of all pro-active commands lies with the SIM Application.

## 6.4.8 SET UP MENU

The SIM shall supply a set of menu items, which shall be integrated with the menu system (or other MMI facility) in order to give the user the opportunity to choose one of these menu items at his own discretion. Each item comprises a short identifier (used to indicate the selection) and a text string. The SIM shall include an alpha identifier which acts as a title for the list of menu items. If \$(NextAction)\$ is supported, the SIM may include an items next action indicator data object located at the end of the list of items. The inclusion of the items next action indicator is to allow the ME to indicate to the user the consequences of performing the selection of an item.

NOTE: The maximum amount of data sent in one proactive SIM command is 256 bytes. It is therefore unavoidable that there is trade-off between the number of items and the length of the descriptive text (the alpha identifier of the SET-UP MENU command and the text strings of the items), e.g. for an average length of 10 bytes per text string the maximum amount of items is 18.

The list of menu items shall then be part of the menu system of the ME and the user is allowed to select an item from this list. The presentation style is left as an implementation decision to the ME manufacturer. The menu provided by the SIM in the last SET UP MENU command shall no longer be part of the menu system of the ME if the ME is powered off or the SIM is removed or electrically reset,

Any subsequent SET-UP MENU command replaces the current list of menu items supplied in the previous SET-UP MENU command. The SET-UP MENU command can also be used to remove a menu from the menu system in the ME; see subclause 6.6.7.

When the ME has successfully integrated or removed the list of menu items, it shall send TERMINAL RESPONSE (OK) to the SIM.

When the ME is not able to successfully integrate or remove the list of menu items, it shall send TERMINAL RESPONSE (Command beyond ME's capabilities).

When the user has selected one of the menu items of this menu item list, then the ME shall use the Menu Selection mechanism to transfer the identifier of the selected menu item to the SIM.

If \$(HelpInfo)\$ is supported and help is available for the command and if the user has indicated the need to get help information on one of the menu items, the ME shall use the Menu Selection mechanism to inform the SIM about this help request.

## 6.4.9 SELECT ITEM

The SIM shall supply a set of items from which the user may choose one. Each item comprises a short identifier (used to indicate the selection) and a text string. Optionally the SIM may include an alpha identifier. The alpha identifier is intended to act as a title for the list of items. If \$(NextAction)\$ is supported, the SIM may include an items next action indicator data object located at the end of the list of items. The inclusion of the items next action indicator is to allow the ME to indicate to the user the consequences of performing the selection of an item.

If \$(Indication)\$ is supported, the alpha identifier included by the SIM shall be used by the ME as the title for the list of items.

NOTE: The maximum amount of data sent in one proactive SIM command is 256 bytes. It is therefore unavoidable that there is trade-off between the number of items and the length of the descriptive text (the alpha identifier of the SELECT ITEM command and the text strings of the items), e.g. for an average length of 10 bytes per text string the maximum amount of items is 18.

The ME shall present the list of text strings to the user, and allow the user to select an item from this list. The presentation style is left as an implementation decision to the ME manufacturer. The menu provided by the SIM in the last SET UP MENU command shall no longer be part of the menu system of the ME if the ME is powered off or the SIM is removed or electrically reset.

If \$(DefItem)\$ is supported, the SIM may supply with the list, if applicable, indication of the default item, e.g. the previously selected item.

When the user has selected an item, the ME shall send TERMINAL RESPONSE (OK) to the SIM with the identifier of the item chosen.

- If the user has indicated the need to end the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Proactive SIM session terminated by the user" result value.
- If the user has indicated the need to go backwards in the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Backward move in the proactive SIM session requested by the user" result value.
- If the ME decides that no user response has been received, the ME shall send a TERMINAL RESPONSE with "No response from user" result value.
- If \$(HelpInfo)\$ is supported and help information is available for the command and if the user has indicated the need to get help information, the ME shall send a TERMINAL RESPONSE with "help information required by the user" result value to the SIM with the identifier of the item for which the user is requiring help information.

## 6.4.10 SEND SHORT MESSAGE

Two types are defined:

- A short message to be sent to the network in an SMS-SUBMIT message, or an SMS-COMMAND message, where the user data can be passed transparently;
- A short message to be sent to the network in an SMS-SUBMIT message where the text needs to be packed by the ME.

Where the text has been packed, the text string provided by the SIM shall not be longer than 160 characters. It shall use the SMS default 7-bit coded alphabet, packed into 8-bit octets, in accordance with GSM 03.38 [5]. The data coding indication contained in the Data Coding Scheme byte shall be "default alphabet". The text length (which is part of the SMS TPDU) given by the SIM shall state the number of 7-bit characters in the text string. The command details shall indicate "packing not required".

8-bit data Short Messages may be sent by the SIM. The command shall indicate packing not required. The data coding indication contained in the Data Coding Scheme byte shall be "8 bit". The string shall not be longer than 140 bytes, and the length (in SMS TPDU) shall state the number of bytes in the string.

If \$(UCS2)\$ is supported by the ME, 16-bit data Short Messages may be sent by the SIM. The text string provided by the SIM shall not be longer than 70 characters. It shall use the 16-bit UCS2 alphabet format, in accordance with GSM 03.38 [5]. The text length (which is part of the SMS TPDU) given by the SIM shall state the number of 16-bit characters in the text string. The command details shall indicate "packing not required".

SMS commands may be sent by the SIM. These shall count as packed text message. The SMS TPDU from the SIM shall indicate SMS-COMMAND. The command details shall indicate "packing not required".

Where packing by the ME is required, the text string provided by the SIM shall not be longer than 160 characters. It shall use the SMS default 7-bit coded alphabet as defined in GSM 03.38 [5] with bit 8 set to 0. The text length given by the SIM shall state the number of characters in the text string. The ME shall pack the text string and modify the Data Coding Scheme byte to "default alphabet" in accordance with GSM 03.38 [5] before submitting the message to the network.

\$(begin\$(Indication))\$

Optionally, the SIM may include in this command an alpha identifier. The use of this alpha identifier by the ME is described below :

- If the alpha identifier is provided by the SIM and is not a null data object, the ME shall use it to inform the user. This is also an indication that the ME should not give any other information to the user on the fact that the ME is sending a short message.
- If the alpha identifier is provided by the SIM and is a null data object (i.e. length = '00' and no value part), this is an indication that the ME should not give any information to the user on the fact that the ME is sending a short message.
- If the alpha identifier is not provided by the SIM, the ME may give information to the user concerning what is happening.

\$(end\$(Indication))\$

If the ME is capable of SMS-MO, then it shall send the data as a Short Message TPDU to the destination address. The ME shall give the result to the SIM using TERMINAL RESPONSE (indicating successful or unsuccessful transmission of the Short Message) after receiving an SMS RP-ACK or RP-Error from the network. If \$(Indication)\$ is supported, if an alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of SMS RP-ACK or RP-Error.

If the Short Message TPDU is unsuccessfully received by the network (e.g. the reception of a CP-ERROR), the ME shall inform the SIM using TERMINAL RESPONSE (network currently unable to process command). If \$(Indication)\$ is supported, if a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the unsuccessful network reception.

## 6.4.11 SEND SS

Even if the Fixed Dialling Number service is enabled, the supplementary service control string included in the SEND SS proactive command shall not be checked against those of the FDN list.

Upon receiving this command, the ME shall decide if it is able to execute the command. Examples are given below, but the list is not exhaustive:

- If the command is rejected because the ME is busy on an SS transaction, the ME informs the SIM using TERMINAL RESPONSE (ME unable to process command - currently busy on SS transaction);

- If \$(sendUSSD)\$ is supported and if the command is rejected because the ME is busy on a USSD transaction, the ME shall inform the SIM using TERMINAL RESPONSE (ME unable to process command - currently busy on USSD transaction);
- If the command is rejected because the ME does not support that Supplementary Service, the ME informs the SIM using TERMINAL RESPONSE (Command beyond ME's capabilities).

If the ME is able to send the SS request, the ME shall:

- Send the SS request immediately, without need to alert the user first.  
\$(release96)\$: Optionally, the ME can give some audible or display indication concerning what is happening.
- \$(begin\$(Indication))\$  
Optionally, the SIM may include in this command an alpha-identifier. The use of this alpha-identifier by the ME is described below:
  - If the alpha identifier is provided by the SIM and is not a null data object, the ME shall use it to inform the user. This is also an indication that the ME should not give any other information to the user on the fact that the ME is sending a SS request.
  - If the alpha identifier is provided by the SIM and is a null data object (i.e. length = '00' and no value part), this is an indication that the ME should not give any information to the user on the fact that the ME is sending an SS request.
  - If the alpha identifier is not provided by the SIM, the ME may give information to the user concerning what is happening.

\$(end\$(Indication))\$

- Once an SS Return Result message not containing an error has been received from the network, the ME shall inform the SIM that the command has been successfully executed, using TERMINAL RESPONSE. This command shall include the contents of SS Return Result as additional data.  
\$(release96)\$: Optionally, the ME may display the result on screen.  
\$(Indication)\$: If a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of an SS Return Result message;
- If the command is rejected because the network cannot support or is not allowing the Supplementary Service request, the ME informs the SIM using TERMINAL RESPONSE (SS Return Result error code).  
\$(Indication)\$: If a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of a SS Return Result message;
- If the SS request is unsuccessfully received by the network, the ME shall inform the SIM using TERMINAL RESPONSE (network currently unable to process command), and not retry to send the request.  
\$(Indication)\$: If a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of a SS Return Result message.

If the ME supports the Last Number Dialed service, the ME shall not store in EF<sub>LND</sub> the supplementary service control string sent by the SIM in this command.

## 6.4.12 SEND USSD

This subclause applies if \$(SendUSSD)\$ is supported.

Upon receiving this command, the ME shall decide if it is able to execute the command. Examples are given below, but the list is not exhaustive:

- If the command is rejected because the ME is busy on a USSD transaction, the ME informs the SIM using TERMINAL RESPONSE (ME unable to process command - currently busy on USSD transaction);
- If the command is rejected because the ME is busy on a SS transaction, the ME informs the SIM using TERMINAL RESPONSE (ME unable to process command - currently busy on SS transaction);

If the ME is able to send the USSD request, the ME shall:

- Send the USSD immediately, without need to alert the user first.  
\$(release96)\$: Optionally, the ME can give some audible or display indication concerning what is happening.
  - \$(begin\$(Indication)\$)\$  
Optionally, the SIM may include in this command an alpha-identifier. The use of this alpha-identifier by the ME is described below:
    - If the alpha identifier is provided by the SIM and is not a null data object, the ME shall use it to inform the user. This is also an indication that the ME should not give any other information to the user on the fact that the ME is sending a USSD request.
    - If the alpha identifier is provided by the SIM and is a null data object (i.e. length = '00' and no value part), this is an indication that the ME should not give any information to the user on the fact that the ME is sending a USSD request.
    - If the alpha identifier is not provided by the SIM, the ME may give information to the user concerning what is happening.
- \$(end\$(Indication)\$)\$
- Once a USSD Return Result message not containing an error has been received from the network, the ME shall inform the SIM that the command has been successfully executed, using TERMINAL RESPONSE. This command shall include the text contained in the USSD Return Result.  
\$(Indication)\$: If a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of a USSD Return Result message;
  - If the USSD operation is rejected because the network cannot support or is not allowing mobile initiated USSD, the ME informs the SIM using TERMINAL RESPONSE (USSD Return Result error code)  
\$(Indication)\$: If a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of a USSD Return Result message;
  - If the USSD request is unsuccessfully received by the network, the ME shall inform the SIM using TERMINAL RESPONSE (network currently unable to process command), and not retry to send the request.  
\$(Indication)\$: If a null alpha identifier was provided by the SIM, the ME should not give any information to the user at the reception of a USSD Return Result message.

### 6.4.13 SET UP CALL

Three types are defined:

- set up a call, but only if not currently busy on another call;
- set up a call, putting all other calls (if any) on hold;
- set up a call, disconnecting all other calls (if any) first.

For each of these types, the SIM may request the use of an automatic redial mechanism according to the GSM 02.07 [19]. The SIM may also request an optional maximum duration for the redial mechanism. The ME shall attempt at least one call set-up.

In addition to the called party number, the command may contain capability configuration parameters (giving the bearer capability to request for the call) and the called party subaddress. The ME shall use these in its call set-up request to the network. The command may also include DTMF digits, which the ME shall send to the network after the call has connected. It is possible for the SIM to request the ME to set up an emergency call by supplying the number "112" as called party number. If the SIM supplies a number stored in EF<sub>ECC</sub>, this shall not result in an emergency call.

If the Fixed Dialling Number service is enabled, the number included in the SET UP CALL proactive command shall not be checked against those of the FDN list.

Upon receiving this command, the ME shall decide if it is able to execute the command. Examples are given below, but the list is not exhaustive:

- If the command is rejected because the ME is busy on another call, the ME informs the SIM using TERMINAL RESPONSE (ME unable to process command - currently busy on call);

- If the command is rejected because the ME is busy on a SS transaction, the ME informs the SIM using TERMINAL RESPONSE (ME unable to process command - currently busy on SS transaction);
- If the command is rejected because the ME cannot support Call Hold, or because the ME does not support the capability configuration parameters requested by the SIM, the ME informs the SIM using TERMINAL RESPONSE (Command beyond ME's capabilities);
- If the command is rejected because the network cannot support or is not allowing Call Hold of a multi party call, the ME informs the SIM using TERMINAL RESPONSE (SS Return Result error code).
- If the command is rejected because the network cannot support or is not allowing Call Hold of a single call, the ME informs the SIM using TERMINAL RESPONSE (Network currently unable to process command).

If the ME is able to set up the call on the serving network, the ME shall:

- Alert the user (as for an incoming call).  
\$(release96)\$: Optionally, the ME can give some indication to the user concerning what is happening, perhaps using the alpha identifier in the command data from the SIM.
- \$(begin\$(Indication))\$  
Optionally, the SIM may include in this command an alpha-identifier. The use of this alpha-identifier by the ME is described below :
  - If the alpha identifier is provided by the SIM, the ME shall use it to inform the user, at the latest when the user is alerted. The ME may also use it to inform the user during the call set-up.
 \$(end\$(Indication))\$;
- If the user accepts the call, the ME shall then set up a call to the destination address given in the response data, with the relevant capability configuration parameters and called party subaddress (if provided by the SIM);
- If the user does not accept the call, or rejects the call, then the ME informs the SIM using TERMINAL RESPONSE (user did not accept call set-up request). The operation is aborted;
- If \$(ExtdRes)\$ is supported and if the user has indicated the need to end the proactive SIM session, the ME shall send a TERMINAL RESPONSE with "Proactive SIM session terminated by the user" result value.
- Optionally, during call set-up, the ME can give some audible or display indication concerning what is happening;
- Once a CONNECT message has been received from the network (defined in GSM 04.08), the ME shall inform the SIM that the command has been successfully executed, using TERMINAL RESPONSE. Operation of the call then proceeds as normal.

If the first call set-up attempt is unsuccessful:

- If the SIM did not request redial then the ME shall inform the SIM using TERMINAL RESPONSE (network currently unable to process command), and not redial to set-up the call;
- If the SIM requested redial, then the ME may automatically redial the call (depending on its capability/configuration). In this case, the ME shall not send a command result to the SIM concerning the first or any subsequent failed set-up attempts. If the call set-up has not been successful, and the ME is not going to perform any more redials, or the time elapsed since the first call set-up attempt has exceeded the duration requested by the SIM, then the ME shall inform the SIM using TERMINAL RESPONSE (network currently unable to process command), and the redial mechanism shall be terminated;
- If the user stops the call set-up attempt or the redial mechanism before a result is received from the network, the ME informs the SIM using TERMINAL RESPONSE (user cleared down call before connection or network release).

If the ME supports the Last Number Dialed service, the ME shall not store in EF<sub>LND</sub> the call set-up details (called party number and associated parameters) sent by the SIM in this command.

## 6.4.14 POLLING OFF

This command disables the Proactive Polling (defined in GSM 11.11 [20]). SIM Presence Detection (defined in GSM 11.11 [20]) is not affected by this command.

## 6.4.15 PROVIDE LOCAL INFORMATION

This command requests the ME to send current local information to the SIM. At present, this information is restricted to:

- location information: the mobile country code (MCC), mobile network code (MNC), location area code (LAC) and cell ID of the current serving cell;
- the IMEI of the ME;
- and, if \$(NMR)\$ is supported, the Network Measurement Results and the BCCH channel list.

The ME shall return the requested local information within a **TERMINAL RESPONSE**. Where location information has been requested and no service is currently available, then the ME shall return **TERMINAL RESPONSE (ME currently unable to process command - no service)**.

If \$(NMR)\$ is supported and the NMR are requested and a call is in progress, the value of all the returned parameters provided by the ME in the response to the command will be valid. However, if a call is not in progress (i.e. ME is in idle mode) some of the returned parameters (e.g. RXQUAL) may be invalid.

NOTE: Network Measurement Results are defined in GSM 04.08 [8] as Measurement Results.

## 6.4.16 SET UP EVENT LIST

This subclause applies to the release 97 feature, \$(Event).

The SIM shall use this command to supply a set of events. This set of events shall become the current list of events for which the ME is to monitor.

Any subsequent **SET UP EVENT LIST** command replaces the current list of events supplied in the previous **SET UP EVENT LIST** command. The **SET UP EVENT LIST** command can also be used to remove the entire list of events current in the ME; see subclause 6.6.16. The list of events provided by the SIM in the last **SET UP EVENT LIST** command shall be removed if the ME is powered off or the SIM is removed or electrically reset.

When the ME has successfully accepted or removed the list of events, it shall send **TERMINAL RESPONSE (OK)** to the SIM.

When the ME is not able to successfully accept or remove the list of events, it shall send **TERMINAL RESPONSE (Command beyond ME's capabilities)**.

When one of the events in the current list occurs, then the ME shall use the Event Download mechanism to transfer details of the event to the SIM; see clause 10.

# 6.5 Common elements in proactive SIM commands

## 6.5.1 Command number

The command number is to cater for the future possibility of multiple ongoing commands (i.e. when the SIM issues further commands before receiving the response to the ongoing command). The implications of such multiple ongoing commands have not been elaborated at this stage of the toolkit specification.

Each command issued by a proactive SIM during a GSM session shall have its own command number. Command numbers may take any hexadecimal value between '01' and 'FE'. The command number is held in the command details data object.

The SIM is responsible for assigning the command number.

The ME shall keep a record of the status of each command and its command number, until the ME gives the result of the command to the SIM, using **TERMINAL RESPONSE**. After this, the ME may erase all internal records concerning this command. The command number is then free for allocation by the SIM to a new command.

When the MS is powered off and on, the details of any ongoing command shall be reset. The ME shall not be expected to know the status of commands issued in a previous GSM session.

## 6.5.2 Device identities

This data object gives the devices which are the source and destination for the instruction. Only certain combinations of source and destination devices are allowed for each proactive command. These are given in clause 14 of this document.

## 6.5.3 Alpha identifier

\$(release 96)\$: Many of the commands include an alpha identifier data object. This is intended to be a short one or two word identifier for the ME to optionally display on screen along with any other indications, at the same time as the ME performs the SIM command. If longer text statements are required, which must be displayed on the screen, the SIM shall send a separate display command.

\$(Indication)\$: Many of the commands include an alpha identifier data object. This is intended to be a short one or two word identifier which shall be displayed on screen by the ME at the same time as the SIM command is performed. If longer text statements are required, which must be displayed on the screen, the SIM shall send a separate display command.

## 6.6 Structure of proactive SIM commands

The general structure of proactive SIM commands using TLV objects is described in annex D.

### 6.6.1 DISPLAY TEXT

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C)            | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| Text string               | 12.15   | M   | Y   | C      |

### 6.6.2 GET INKEY

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C)            | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| Text string               | 12.15   | M   | Y   | C      |

- Text string  
Contents: text for the ME to display in conjunction with asking the user to respond.

### 6.6.3 GET INPUT

| Description                                         | Section | M/O | Min | Length |
|-----------------------------------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag                           | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D+E)                                  | -       | M   | Y   | 1 or 2 |
| Command details                                     | 12.6    | M   | Y   | A      |
| Device identities                                   | 12.7    | M   | Y   | B      |
| Text string                                         | 12.15   | M   | Y   | C      |
| Response length                                     | 12.11   | M   | Y   | D      |
| Default Text (only if \$(DefChoice)\$ is supported) | 12.23   | O   | N   | E      |

- Text string  
Contents: text for the ME to display in conjunction with asking the user to respond.

- Response length  
Contents: the minimum and maximum acceptable lengths for the response from the user.
- Default Text (only if \$(DefChoice)\$ is supported)  
Contents: text for the ME to display if \$(DefChoice)\$ is supported, corresponds to a default text string offered by the SIM.

#### 6.6.4 MORE TIME

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B)              | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |

#### 6.6.5 PLAY TONE

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D+E)        | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| Alpha identifier          | 12.2    | O   | N   | C      |
| Tone                      | 12.16   | O   | N   | D      |
| Duration                  | 12.8    | O   | N   | E      |

##### Tone

Contents: the standard supervisory tone or proprietary ME tone that the ME shall generate, either on its own or on top of the downlink audio path. If no tone is specified, then the ME shall default to "general beep".

NOTE: Some supervisory tones are optional for mobile equipment (see GSM 02.40 [18]).

- Duration  
Contents: the length of time for which the ME shall generate the tone, if the tone is continuous or repeatable. For single tones, the value of this data object shall be ignored by the ME. If no duration is specified, the ME shall default to a duration determined by the ME manufacturer.

#### 6.6.6 POLL INTERVAL

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C)            | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| Duration                  | 12.8    | M   | Y   | C      |

- Duration  
Contents: the maximum interval between two STATUS commands related to Proactive Polling.

## 6.6.7 SET-UP MENU

| Description                                                         | Section | M/O | Min | Length |
|---------------------------------------------------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag                                           | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D1+D2+...Dn+E)                                        | -       | M   | Y   | 1 or 2 |
| Command details                                                     | 12.6    | M   | Y   | A      |
| Device identities                                                   | 12.7    | M   | Y   | B      |
| Alpha identifier                                                    | 12.2    | M   | Y   | C      |
| Item data object for item 1                                         | 12.9    | M   | Y   | D1     |
| Item data object for item 2                                         | 12.9    | O   | N   | D2     |
| .....                                                               | 12.9    | O   | N   | Dx     |
| Item data object for last item in list                              | 12.9    | O   | N   | Dn     |
| Items Next Action Indicator (only if \$(NextAction)\$ is supported) | 12.24   | O   | N   | E      |

The SET-UP MENU command BER-TLV data object shall contain Item SIMPLE-TLV data objects. Each Item data object contains an item in the list, for the user to choose. The length of each Item data object may be different. Within a list, each Item shall have a unique item identifier.

If the "Item data object for item 1" is a null data object (i.e. length = '00' and no value part), this is an indication to the ME to remove the existing menu from the menu system in the ME.

If the SIM supports \$(NextAction)\$, it shall provide an Items Next Action Indicator data object with the comprehension required flag set to '0'.

## 6.6.8 SELECT ITEM

| Description                                                         | Section | M/O | Min | Length |
|---------------------------------------------------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag                                           | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D1+D2+...Dn+E+F)                                      | -       | M   | Y   | 1 or 2 |
| Command details                                                     | 12.6    | M   | Y   | A      |
| Device identities                                                   | 12.7    | M   | Y   | B      |
| Alpha identifier                                                    | 12.2    | O   | N   | C      |
| Item data object for item 1                                         | 12.9    | M   | Y   | D1     |
| Item data object for item 2                                         | 12.9    | O   | N   | D2     |
| .....                                                               | 12.9    | O   | N   | Dx     |
| Item data object for last item in list                              | 12.9    | O   | N   | Dn     |
| Items Next Action Indicator (only if \$(NextAction)\$ is supported) | 12.24   | O   | N   | E      |
| Item Identifier (only if \$(DefItem)\$ is supported)                | 12.10   | O   | N   | F      |

The SELECT ITEM command BER-TLV data object shall contain Item SIMPLE-TLV data objects. Each Item data object contains an item in the list, for the user to choose. The length of each Item data object may be different. Within a list, each Item shall have a unique item identifier. If \$(DefItem)\$ is supported, the SELECT ITEM command BER-TLV data object may contain a single Item Identifier data object as an indication of the default item. The Comprehension Required flag in the Item Identifier data object shall be set to 0, indicating that it is not mandatory for the ME to support indication of the default item.

If the SIM supports \$(NextAction)\$ it shall provide an Items Next Action Indicator data object with a comprehension required flag set to '0'.

## 6.6.9 SEND SHORT MESSAGE

| Description                          | Section | M/O | Min | Length |
|--------------------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag            | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D+E)                   | -       | M   | Y   | 1 or 2 |
| Command details                      | 12.6    | M   | Y   | A      |
| Device identities                    | 12.7    | M   | Y   | B      |
| Alpha identifier                     | 12.2    | O   | N   | C      |
| Address                              | 12.1    | O   | N   | D      |
| SMS TPDU (SMS-SUBMIT or SMS-COMMAND) | 12.13   | M   | Y   | E      |

The address data object holds the RP\_Destination\_Address of the Service Centre. If no RP\_Destination\_Address is transferred, then the ME shall insert the default Service Centre address.

## 6.6.10 SEND SS

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D)          | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| Alpha identifier          | 12.2    | O   | N   | C      |
| SS string                 | 12.14   | M   | Y   | D      |

## 6.6.11 SEND USSD

This subclause applies to the release 97 feature, \$(SendUSSD\$).

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D)          | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| Alpha identifier          | 12.2    | O   | N   | C      |
| USSD String               | 12.17   | M   | Y   | D      |

## 6.6.12 SET UP CALL

| Description                         | Section | M/O | Min | Length |
|-------------------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag           | 13.2    | M   | Y   | 1      |
| Length (A+B+C+D+E+F+G)              | -       | M   | Y   | 1 or 2 |
| Command details                     | 12.6    | M   | Y   | A      |
| Device identities                   | 12.7    | M   | Y   | B      |
| Alpha identifier                    | 12.2    | O   | N   | C      |
| Address                             | 12.1    | M   | Y   | D      |
| Capability configuration parameters | 12.4    | O   | N   | E      |
| Called party subaddress             | 12.3    | O   | N   | F      |
| Duration                            | 12.8    | O   | N   | G      |

If the capability configuration parameters are not present, the ME shall assume the call is a speech call.

If the called party subaddress is not present, the ME shall not provide a called party subaddress to the network.

If the duration is not present, the SIM imposes no restrictions on the ME of the maximum duration of redials.

### 6.6.13 REFRESH

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C)            | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |
| File List                 | 12.18   | M/O | N   | C      |

For the refresh modes “File Change Notification“ and “SIM Initialization and File Change Notification”, the SIM shall supply a File List data object, indicating which EFs need to be refreshed. For other modes, inclusion of a File List is optional, and the ME shall ignore it.

### 6.6.14 POLLING OFF

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B)              | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device identities         | 12.7    | M   | Y   | B      |

### 6.6.15 PROVIDE LOCAL INFORMATION

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B)              | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device Identities         | 12.7    | M   | Y   | B      |

### 6.6.16 SET UP EVENT LIST

This subclause applies to the release 97 feature, \$(Event)\$.

| Description               | Section | M/O | Min | Length |
|---------------------------|---------|-----|-----|--------|
| Proactive SIM command Tag | 13.2    | M   | Y   | 1      |
| Length (A+B+C)            | -       | M   | Y   | 1 or 2 |
| Command details           | 12.6    | M   | Y   | A      |
| Device Identities         | 12.7    | M   | Y   | B      |
| Event list                | 12.25   | M   | Y   | C      |

If the Event list is a null data object (i.e. length = '00' and no value part), this is an indication to the ME to remove the existing list of events in the ME.

## 6.7 Command results

Once the ME has made its attempt to execute a proactive command from the SIM, the ME shall inform the SIM of the success or otherwise of that command, by using TERMINAL RESPONSE. This message gives the command details, including the number of the command (see subclause 6.5.1), a general result, and sometimes more specific information.

Three overall categories of results are defined:

- Command performed successfully. This is returned by the ME for every successful command;
- Temporary problem with executing command. This is further defined below, but generally these indicate to the SIM that it is worth trying again later;

- Permanent problem with executing command. These are further defined below, but generally indicate that the same command will end in the same result if repeated during the same GSM session.

Successful commands are further defined as:

- Command performed successfully. There were no problems;
- Command performed with partial comprehension. Here the ME receives a command with one or more SIMPLE-TLV data objects that are unrecognized or unexpected, all of which do not have their "comprehension required" flag set (subclause 13.3), but the parent BER-TLV data object still has the minimum set of SIMPLE-TLV data objects required to perform the command;
- Command performed, with missing information. The ME received at least the minimum set of component parts, but did not receive all of the parts that it believed mandatory for the SIM to send.
- For \$(TRCC)\$, command performed, but modified by call control. This is sent by the ME to indicate that call control modified the type of request indicated in the proactive command, and that the action requested by call control was performed successfully.

Temporary problems are further defined as:

- ME is currently unable to process the command. Specific causes for this are:
  - the screen is busy;
  - ME currently busy on a call;
  - ME currently busy on SS transaction;
  - ME currently busy on USSD operation;
  - no service is currently available;
  - access control class barred on serving network;
  - no radio resource currently available;
  - not in speech call.

If none of these can be made to apply, a "no cause can be given" value can be used.

- Network is currently unable to process the command. Specific cause values are the cause values given by the network, as defined in GSM 04.08 [8].
- The user did not accept the call set-up request. This is where the ME alerts the user before setting up a call, and the user either rejected or did not accept the "call".
- The user cleared down the call, before the call connected (CONNECT received from network, as defined in GSM 04.08 [8]) or before the network released the call.
- For \$(TRCC)\$, interaction with call control by SIM, temporary problem. This is sent by the ME to indicate that call control modified the type of request indicated in the proactive command, and that the action requested by call control encounters a temporary problem.

Permanent problems are further defined as:

- Command is beyond ME's capabilities. This is sent by the ME when it understands what the SIM is asking it to do, but does not have the capability to do it, e.g. ME which only supports SMS asked to set up a call.
- Command type not understood by ME. This is sent by the ME when the SIM sends a command with the Type of Command byte set to a value the ME does not know. This is to allow future expansion of commands.
- Command data not understood by ME. This is sent by the ME when the command type is understood by the ME, but the related data object(s) are not, e.g. reserved values have been included in a data object, or one or more unknown SIMPLE-TLV data objects have a "comprehension required" tag.
- SS Return Error. This is given to the SIM when the network returns a SS error in response to a previous SS command. Specific cause values are the same as given by the network in the Return Error message.
- USSD Return Error, if \$(SendUSSD)\$ is supported. This is given to the SIM when the network returns a USSD error in response to a previous USSD command. Specific cause values are the same as given by the network in a Return Error message.

- SMS RP-ERROR. This is given to the SIM when the network returns an error in response to the ME trying to send a short message. Specific cause values are the same as the cause value of RP-Cause in an RP-ERROR message.
- Error, required values are missing. This is given when the command type is understood by the ME, but it does not receive the minimum set of SIMPLE-TLV data objects that it requires to perform the command. These components are shown by the "Min" column in the command structure definitions.

The remainder of the subclause applies to the release 97 feature, \$(TRCC)\$.

- Interaction with call control by SIM or MO short message control by SIM, permanent problem. This is sent by the ME to indicate that:
  - call control by SIM does not allow the action corresponding to the proactive command or
  - call control by SIM has modified the type of request indicated in the proactive command and that the action requested by call control encounters a permanent problem.

Specific cause values for this are :

- action not allowed;
- the type of request has changed;

If none of these can be made to apply, a "no cause can be given" value can be used.

## 6.8 Structure of TERMINAL RESPONSE

Direction: ME to SIM

The command header is specified in GSM 11.11 [14]. Length (A+B+C+D+E+F+G+H+I) is indicated by P3 of the header.

Command parameters/data:

| Description                                                                                                                                                                                    | Section                                                                    | M/O | Min | Length |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|-----|-----|--------|
| Command details                                                                                                                                                                                | 12.6                                                                       | M   | Y   | A      |
| Device identities                                                                                                                                                                              | 12.7                                                                       | M   | N   | B      |
| Result                                                                                                                                                                                         | 12.12                                                                      | M   | Y   | C      |
| Duration (only required in response to a POLL INTERVAL proactive command)                                                                                                                      | 12.8                                                                       | M/O | Y/N | D      |
| Text string (only required in response to a GET INKEY or GET INPUT or SEND USSD, if \$(SendUSSD)\$ is supported, proactive command)                                                            | 12.15                                                                      | M/O | Y/N | E      |
| Item identifier (only required in response to SELECT ITEM proactive command)                                                                                                                   | 12.10                                                                      | M/O | Y/N | F      |
| Local information (only required in response to PROVIDE LOCAL INFORMATION proactive command)                                                                                                   | 12.19<br>/12.20<br>/if \$(NMR)\$<br>is<br>supported,<br>12.22 and<br>12.29 | M/O | Y/N | G      |
| Call control requested action (only required if call control by SIM has modified a proactive command SET UP CALL, SEND SS or SEND USSD in another type of request); if \$(TRCC)\$ is supported | 12.30                                                                      | M/O | Y/N | H      |
| Result data object 2 (only required if call control by SIM has modified a proactive command SET UP CALL, SEND SS or SEND USSD in another type of request); if \$(TRCC)\$ is supported          | 12.12                                                                      | M/O | Y/N | I      |

- Command details: this data object shall be identical to the command details data object (including the comprehension required flag) given by the SIM in the proactive command to which the ME is giving the result.

If the ME has not received a valid Command number, all Command Details object values shall be set to '00' and the Result shall indicate an error.

If the failure is caused by a problem on the transmission layer, the ME shall respond with "temporary problem" ("ME currently not able to process command"). If not, the ME shall respond with "permanent problem" (either "command not understood by ME" or "Error required values are missing").

The SIM shall interpret a Terminal Response with a command number '00' as belonging to the last proactive command having been sent to the ME.

- Device identities: the ME shall set the device identities to:
 

|              |     |
|--------------|-----|
| Source:      | ME  |
| Destination: | SIM |
- Result: This data object holds the result of the proactive SIM command.
- Duration: When the ME issues a successful TERMINAL RESPONSE for a POLL INTERVAL command, it shall state the polling interval it will be using in the Duration data object. All other types of TERMINAL RESPONSE do not need to include Duration. If one is included by the ME, the SIM shall ignore it.
- Text string: When the ME issues a successful TERMINAL RESPONSE ('0X' result value - refer to subclause 12.12) for a GET INKEY or GET INPUT or SEND USSD (if \$(SendUSSD)\$ is supported) command, it shall supply the single character or the character string entered by the user in the Text string data object, or the text returned within the Return Result message from the network for the USSD command, no matter what type of string was entered. All other types of TERMINAL RESPONSE do not need to include Text string. If one is included by the ME, the SIM shall ignore it.
- Item identifier: When the ME issues a successful TERMINAL RESPONSE ('0X' result value - refer to subclause 12.12) for a SELECT ITEM command, it shall supply the identifier of the item selected by the user in the Item identifier data object. If \$(Helpinfo)\$ is supported and the ME issues a TERMINAL RESPONSE with result "Help information required by the user" for a SELECT ITEM command, it shall supply the identifier of the item for which the user is requiring help information. All other types of TERMINAL RESPONSE do not need to include Item identifier. If one is included by the ME, the SIM shall ignore it.
- Local information. When the ME issues a successful TERMINAL RESPONSE for a PROVIDE LOCAL INFORMATION command, it shall supply the requested local information.
  - Where the SIM has requested location information, TERMINAL RESPONSE shall contain the location information data object. All other types of TERMINAL RESPONSE do not need to include location information. If one is included by the ME, the SIM shall ignore it.
  - Where the SIM has requested the IMEI, TERMINAL RESPONSE shall contain the IMEI data object. All other types of TERMINAL RESPONSE do not need to include IMEI information. If one is included by the ME, the SIM shall ignore it.
  - If \$(NMR)\$ is supported: Where the SIM has requested the Network Measurement Results the TERMINAL RESPONSE shall contain the NMR data object and the BCCH channel list data object. All other types of TERMINAL RESPONSE do not need to include the NMR information or the BCCH channel list. If one is included by the ME, the SIM shall ignore it.
- Call control requested action, when \$(TRCC)\$ is supported. When the ME issues a TERMINAL RESPONSE for a proactive command SET UP CALL, SEND SS or SEND USSD which has been modified by call control by SIM in another type of request, it shall supply the response data given in response to the ENVELOPE (CALL CONTROL).
- Result data object 2, when \$(TRCC)\$ is supported. When the ME issues a TERMINAL RESPONSE for a proactive command SET UP CALL, SEND SS or SEND USSD which has been modified by call control by SIM in another type of request, it shall supply the Result data object it would have supplied for the proactive command equivalent to the action requested by call control, and given in the Call control request data element.

Under no circumstances shall the SIM wait indefinitely for a TERMINAL RESPONSE.

Any future additional SIMPLE-TLV objects shall be included as Min = N and comprehension not required. This will ensure that any proactive command will end in a predictable way.

Response parameters/data: None.

## 6.9 Proactive SIM session and ME display interaction

During a proactive session the ME display shall be refreshed by any display data contained in the first and each subsequent proactive command. The refresh shall occur once the ME has retrieved the proactive command using the Fetch instruction, following the proactive command pending status response.

If no proactive command is pending (status response of '90 00' following the Terminal Response), then the session releases the display back into ME control. If this session was terminated in a backwards move, and the session was initiated from an Envelope command containing a Menu Selection, it is recommended that the display returns to the Setup Menu.

## 6.10 Handling of unknown, unforeseen and erroneous messages

### 6.10.1 General

The procedures described in this subclause apply to the BER-TLV and SIMPLE-TLV data objects described in this TS. The purpose of this subclause is to allow greater flexibility in future versions of this document, and a greater predictability across different versions of this standard.

The procedures described here specify how the ME and SIM shall behave when they receive a proactive command or response that is not fully compliant with the standards by which it was designed. A response will be made to the SIM by means of the "general result" field of the "result"

If the ME sends a FETCH or TERMINAL RESPONSE to the SIM that contains values that the SIM does not understand, then the SIM shall issue the appropriate SW1 / SW2 error response. The current proactive transaction shall be considered complete and neither the ME or the SIM shall take no further action with regard to it. In this case, unless the "General result" is "command performed..." then the SIM shall assume that the command was not carried out and that a permanent error exists with regard to that particular proactive command. If the command was performed, but the "additional information on result" field was not understood, then the SIM may attempt the command again at a later stage in the current GSM session.

If the SIM has enough information to proceed (i.e. it has received all the data objects of the Minimum set) then it shall do so.

### 6.10.2 Message too short

Any information received that is not a complete tag and length shall be ignored.

### 6.10.3 Missing minimum information

If a message is received that does not have all the mandatory elements in it, then if all of the minimum set elements are present then the receiver shall complete the command and report "command performed, with missing information".

If the minimum set of elements is not complete, then the ME shall respond with "Error, required values are missing".

### 6.10.4 Unknown Tag value

If a BER-TLV object is received that has a tag that is understood, but contains SIMPLE-TLV components that have unknown tags, then provided the minimum set condition is fulfilled, the "comprehension required" bit of the tag shall determine how the receiving entity behaves.

If the comprehension required flag in an unknown tag is set to '1', and the ME either does not recognize or is not expecting one or more of the SIMPLE-TLV objects in the message, then it shall respond with "Command data not understood by ME".

If the comprehension required flag is set to '0', then the ME shall read the length field that follows and ignore that object. In this case the ME will be able to carry out the command without the SIMPLE-TLV components that it cannot understand. It shall respond with "command performed with partial comprehension".

### 6.10.5 Unexpected Tag value

If a BER-TLV object is received that contains elements that have recognisable tags, but which were not expected in the context of this message (for example, the ME sees SMS TDPU tag as part of TEXT FOR DISPLAY), then it shall discard that element. It shall then proceed as described for Unknown Tag values.

If a received object has a tag that has already been received, then the first instance shall be used and any subsequent instances shall be discarded.

### 6.10.6 Length errors

If the total lengths of the SIMPLE-TLV data objects are not consistent with the length given in the BER-TLV data object, then the whole BER-TLV data object shall be rejected. The result field in the TERMINAL RESPONSE shall have the error condition "Command data not understood by ME".

If the length of the BER-TLV data object is shorter than the length of the response data, the ME shall ignore response data following the complete BER-TLV data object. If the length of the BER-TLV data object is longer than the length of the response data, then sections 6.10.2. and 6.10.3 apply.

### 6.10.7 Contents not understood

If the contents of a SIMPLE-TLV data object contains a field with a value that is defined as reserved, then the whole SIMPLE-TLV data object shall be considered as invalid. It will then depend on the "comprehension required" bit of the relevant tag as to whether the whole BER-TLV data object shall be rejected, or whether that particular SIMPLE-TLV data object shall be ignored.

If the contents of a BER-TLV object contains RFU bits or bytes, then these shall be ignored.

### 6.10.8 Extended length data objects

If a SIMPLE-TLV data object has a length longer than expected (i.e. more information has been added), then the receiver shall ignore this extra information to the end of the object. The end of the object shall be found by looking at the "length" field of that object.

NOTE: If comprehension of the extra bytes is required, this can be achieved by the use of a reserved coding in an earlier field.

## 6.11 Proactive commands versus possible Terminal response

The following table shows for each proactive command the possible terminal response returned (marked by a "•" character).

|                   |                                                                                                        | Proactive Command |           |             |           |               |             |              |                |          |             |          |         |           |                     |           |                   |
|-------------------|--------------------------------------------------------------------------------------------------------|-------------------|-----------|-------------|-----------|---------------|-------------|--------------|----------------|----------|-------------|----------|---------|-----------|---------------------|-----------|-------------------|
|                   |                                                                                                        | GET INKEY         | GET INPUT | SELECT ITEM | PLAY TONE | DIS-PLAY TEXT | SET UP MENU | POLL-ING OFF | POLL INTER-VAL | RE-FRESH | SET UP CALL | SEND SMS | SEND SS | SEND USSD | PRO-VIDE LOCAL INFO | MORE TIME | SET UP EVENT LIST |
| Terminal response |                                                                                                        |                   |           |             |           |               |             |              |                |          |             |          |         |           |                     |           |                   |
| 00                | Command performed successfully                                                                         | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 01                | Command performed with partial comprehension                                                           | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 02                | Command performed, with missing information                                                            | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 03                | REFRESH performed with additional EFs read                                                             |                   |           |             |           |               |             |              | •              |          |             |          |         |           |                     |           |                   |
| 05                | Command performed, but modified by call control by SIM; \$(TRCC)\$                                     |                   |           |             |           |               |             |              |                | •        |             | •        | •       |           |                     |           |                   |
| 10                | Proactive SIM session terminated by the user                                                           | •                 | •         | •           | •         | •             |             |              |                | •        |             |          |         |           |                     |           |                   |
| 11                | Backward move in the proactive SIM session requested by the user                                       | •                 | •         | •           |           | •             |             |              |                |          |             |          |         |           |                     |           |                   |
| 12                | No response from user                                                                                  | •                 | •         | •           |           | •             |             |              |                |          |             |          |         |           |                     |           |                   |
| 13                | Help information required by the user, \$(HelpInfo)\$                                                  | •                 | •         | •           |           |               |             |              |                |          |             |          |         |           |                     |           |                   |
| 20                | ME currently unable to process command                                                                 | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 21                | Network currently unable to process command                                                            |                   |           |             |           |               |             |              |                | •        | •           | •        | •       |           |                     |           |                   |
| 22                | User did not accept call setup request                                                                 |                   |           |             |           |               |             |              |                | •        |             |          |         |           |                     |           |                   |
| 23                | User cleared down call before connection or network release                                            |                   |           |             |           |               |             |              |                | •        |             |          |         |           |                     |           |                   |
| 25                | interaction with call control by SIM, temporary problem; \$(TRCC)\$                                    |                   |           |             |           |               |             |              |                | •        |             | •        | •       |           |                     |           |                   |
| 30                | Command beyond MEs capabilities                                                                        | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 31                | Command type not understood by ME                                                                      | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 32                | Command data not understood by ME                                                                      | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 33                | Command number not known by ME                                                                         | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 34                | SS Return Error                                                                                        |                   |           |             |           |               |             |              |                | •        |             | •        |         |           |                     |           |                   |
| 35                | SMS RPERERROR                                                                                          |                   |           |             |           |               |             |              |                |          | •           |          |         |           |                     |           |                   |
| 36                | Error, required values are missing                                                                     | •                 | •         | •           | •         | •             | •           | •            | •              | •        | •           | •        | •       | •         | •                   | •         | •                 |
| 37                | USSD return error                                                                                      |                   |           |             |           |               |             |              |                |          |             |          | •       |           |                     |           |                   |
| 39                | interaction with call control by SIM or MO short message control by SIM, permanent problem; \$(TRCC)\$ |                   |           |             |           |               |             |              |                | •        | •           | •        | •       |           |                     |           |                   |

## 7 Data download to SIM

### 7.1 SMS-PP data download

#### 7.1.1 Procedure

If the service "data download via SMS Point-to-point" is allocated and activated in the SIM Service Table (see GSM 11.11 [14]), then the ME shall follow the procedure below:

- When the ME receives a Short Message with:  
     protocol identifier = SIM data download, and  
     data coding scheme = class 2 message,  
     then the ME shall pass the message transparently to the SIM using the ENVELOPE (SMS-PP DOWNLOAD) command as defined below.
- The ME shall not display the message, or alert the user of a short message waiting.
- The ME shall wait for an acknowledgement from the SIM.
- If the SIM responds with '90 00', the ME shall acknowledge the receipt of the short message to the network using an RP-ACK message.
- If the SIM responds with '93 00', the ME shall either retry the command or send back an RP-ERROR message to the network with the TP-FCS value indicating "SIM Application Toolkit Busy" (see GSM 03.40 [6]).
- If the SIM responds with '9F XX', the ME shall use the GET RESPONSE command to get the response data. The response data from the SIM will be supplied by the ME in the TP-User-Data element of the RP-ACK message it will send back to the network (see GSM 03.40 [6] and GSM 04.11 [9]). The values of protocol identifier and data coding scheme in RP-ACK shall be as in the original message.
- If \$(DDLerror)\$ is supported and if the ME has indicated in TERMINAL PROFILE that it supports the status word '9E XX' and if the SIM responds with '9E XX', the ME shall use the GET RESPONSE command to get the response data. The response data from the SIM will be supplied by the ME in the TP-User-Data element of the RP-ERROR message it will send back to the network (see GSM 03.40 [6] and GSM 04.11 [9]). The values of protocol identifier and data coding scheme in RP-ERROR shall be as in the original message. The value of the TP-FCS element of the RP-ERROR shall be "SIM data download error".

If the service "data download via SMS-PP" is not allocated and activated in the SIM Service Table, and the ME receives a Short Message with the protocol identifier = SIM data download and data coding scheme = class 2 message, then the ME shall store the message in EF<sub>SMS</sub> in accordance with GSM 11.11 [14].

NOTE: MEs not supporting SIM Application Toolkit are likely to store data download messages in EF<sub>SMS</sub>, as if they were normal short messages.

#### 7.1.2 Structure of ENVELOPE (SMS-PP DOWNLOAD)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description            | Section | M/O | Min | Length |
|------------------------|---------|-----|-----|--------|
| SMS-PP download tag    | 13.1    | M   | Y   | 1      |
| Length (A+B+C)         | -       | M   | Y   | 1 or 2 |
| Device identities      | 12.7    | M   | Y   | A      |
| Address                | 12.1    | O   | N   | B      |
| SMS TPDU (SMS-DELIVER) | 12.13   | M   | Y   | C      |

- Device identities: the ME shall set the device identities to:
  - Source: Network
  - Destination: SIM
- Address: The address data object holds the RP\_Originating\_Address of the Service Centre (TS-Service-Centre-Address), as defined in GSM 04.11 [9].

Response parameters/data:

It is permissible for the SIM not to provide response data. If the SIM responds with '90 00' then no response parameter shall be available, otherwise the SIM shall respond with '9F XX' or '9E XX', if \$(DDL is supported), and the following data is returned:

| Byte(s)     | Description         | Length |
|-------------|---------------------|--------|
| 1-X (X≤128) | SIM Acknowledgement | X      |

## 7.2 Cell Broadcast data download

### 7.2.1 Procedure

If the service "data download via SMS-CB" is allocated and activated in the SIM Service Table (see GSM 11.11 [14]), then the ME shall follow the procedure below:

- When the ME receives a new Cell Broadcast message, the ME shall compare the message identifier of the Cell Broadcast message with the message identifiers contained in EF<sub>CBMID</sub>.
- If the message identifier is found in EF<sub>CBMID</sub>, the cell broadcast page is passed to the SIM using the ENVELOPE (CELL BROADCAST DOWNLOAD) command, defined below. The ME shall not display the message.
- If the message identifier of the incoming cell broadcast message is not found in EF<sub>CBMID</sub>, then the ME shall determine if the message should be displayed, by following the procedures in GSM 03.41 [7] and GSM 11.11 [14].

The ME shall identify new cell broadcast pages by their message identifier, serial number and page values.

### 7.2.2 Structure of ENVELOPE (CELL BROADCAST DOWNLOAD)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description                 | Section | M/O | Min | Length |
|-----------------------------|---------|-----|-----|--------|
| Cell Broadcast Download tag | 13.1    | M   | Y   | 1      |
| Length (A+B)                | -       | M   | Y   | 1 or 2 |
| Device identities           | 12.7    | M   | Y   | A      |
| Cell Broadcast page         | 12.5    | M   | Y   | B      |

- Device identities: the ME shall set the device identities to:
  - Source: Network
  - Destination: SIM

Response parameters/data: None for this type of ENVELOPE command.

---

## 8 Menu Selection

A set of possible menu options can be supplied by the SIM using the proactive command SET UP MENU. If the SIM has sent this command, and the user subsequently chooses an option or, if \$(HelpInfo)\$ is supported, the user requests help on it, the ME informs the SIM using this procedure.

## 8.1 Procedure

If the service "menu selection" is allocated and activated in the SIM Service Table (see GSM 11.11 [14]), then the ME shall follow the procedure below.

- When the ME receives a menu selection from one of the menu items defined by a "SET-UP MENU" command issued previously by the SIM, or, if \$(HelpInfo)\$ is supported, the user has indicated the need to get help information on one of these menu items, then it shall pass the identifier of the selected menu item to the SIM using the ENVELOPE (MENU SELECTION) command, as defined below.

## 8.2 Structure of ENVELOPE (MENU SELECTION)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description                                   | Section | M/O | Min | Length |
|-----------------------------------------------|---------|-----|-----|--------|
| Menu Selection tag                            | 13.1    | M   | Y   | 1      |
| Length (A+B+C)                                | -       | M   | Y   | 1 or 2 |
| Device identities                             | 12.7    | M   | Y   | A      |
| Item identifier                               | 12.10   | M   | Y   | B      |
| Help request (if \$(HelpInfo)\$ is supported) | 12.21   | O   | N   | C      |

- Device identities: the ME shall set the device identities to:  
Source: Keypad  
Destination: SIM
- Help request (if \$(HelpInfo)\$ is supported): inclusion of this data object depends upon whether the user actually selected the named menu item or just requested help information on it. If the user actually selected the menu item, this data object shall not be included. If the user indicated the need to get help information on the menu item, this data object shall be included.

Response parameters/data: None for this type of ENVELOPE command.

## 9 Call Control by SIM

### 9.1 Procedure for mobile originated calls

If the service "call control" is allocated and activated in the SIM Service Table (see GSM 11.11 [14]), then the ME shall follow the procedure below:

- For all call set-up attempts (even those resulting from a SET UP CALL proactive SIM command, or those occurring when another call is already in progress), the ME shall first pass the call set-up details (dialled digits and associated parameters) to the SIM, using the ENVELOPE (CALL CONTROL) command defined below. If \$(CellidCC)\$ is supported, the ME shall also pass to the SIM in the ENVELOPE (CALL CONTROL) command the current serving cell. One exception is for the ME managing automatic redial attempts, for which the ME is required to pass the call set-up details to the SIM for the first attempt only. The only other exception is for the user dialling "112" or an emergency call code stored in EF<sub>ECC</sub>, for which the ME sets up an emergency call instead of passing the call set-up details to the SIM.
- If the SIM responds with '90 00', the ME shall set up the call with the dialled digits and other parameters as sent to the SIM.
- If the SIM responds with '93 00', the ME shall not set up the call and may retry the command.
- If the SIM responds with '9F XX', the ME shall use the GET RESPONSE command to get the response data. The response data from the SIM shall indicate to the ME whether to set up the call as proposed, not set up the call, set up a call using the data supplied by the SIM, or instead send a supplementary service or USSD operation using the data

supplied by the SIM. It is mandatory for the ME to perform the call set-up request and the supplementary service or USSD operation in accordance with the data from the SIM. It is possible for the SIM to request the ME to set up an emergency call by supplying the number "112" as the response data. If the SIM supplies a number stored in EF<sub>ECC</sub>, this shall not result in an emergency call.

\$(release 96)\$: Optionally, the ME may indicate to the user that the call has been barred, changed, or replaced by a supplementary service or USSD operation.

The following five bullet points apply to the \$(TRCC)\$ feature, in the case where the initial call set-up request results from a proactive command SET UP CALL:

- if the call control result is "not allowed", the ME shall inform the SIM using TERMINAL RESPONSE ("interaction with call control by SIM or MO short message control by SIM, action not allowed").
- if the call set-up request is changed by call control in a supplementary service or USSD operation, then the ME shall send this request to the network. The ME shall then send back a TERMINAL RESPONSE to the SET UP CALL command at the same time it would have done for the proactive command equivalent to the action requested by call control (i.e. SEND SS or SEND USSD). However, in that case, the TERMINAL RESPONSE shall contain the response data given in the response to ENVELOPE (CALL CONTROL) and a second Result TLV identical to the one given in response to the proactive command equivalent to the action requested by call control (i.e. SEND SS or SEND USSD). The mapping between the general result in the first Result TLV and the general result in the second Result TLV is given below :
- the general result "command performed, but modified by call control by SIM" shall be given in the first Result TLV if the general result of the second Result TLV is '0X' or '1X'.
- the general result "interaction with call control by SIM, temporary problem" shall be given in the first Result TLV if the general result of the second Result TLV is '2X'.
- the general result "interaction with call control by SIM or MO short message control by SIM, permanent problem" shall be given in the first Result TLV if the general result of the second Result TLV is '3X'.

If the ME supports the Last Number Dialed service, the ME shall update EF<sub>LND</sub> with the call set-up details (digits string and associated parameters) corresponding to the initial user request.

The ME shall then follow the call set-up procedure defined in GSM 04.08 [8] or the supplementary service or USSD operation procedure defined in GSM 04.80 [10].

## 9.2 Procedure for Supplementary Services and USSD

If the service "call control" is allocated and activated in the SIM Service Table (see GSM 11.11 [14]), then for all supplementary service and USSD operations (including those resulting from a SEND SS or SEND USSD proactive SIM command), the ME shall first pass the supplementary service or USSD control string (corresponding to the supplementary service or USSD operation and coded as defined in GSM 02.30 [4], even if this SS or USSD operation has been performed via a specific menu of the ME) to the SIM, using the ENVELOPE (CALL CONTROL) command defined below. If \$(CellidCC)\$ is supported, the ME shall also pass to the SIM in the ENVELOPE (CALL CONTROL) command the current serving cell.

The SIM shall respond in the same way as for mobile originated calls. The ME shall interpret the response as follows:

- If the SIM responds with '90 00', the ME shall send the supplementary service or USSD operation with the information as sent to the SIM.
- If the SIM responds with '93 00', the ME shall not send the supplementary service or USSD operation and may retry the command.
- If the SIM responds with '9F XX', the ME shall use the GET RESPONSE command to get the response data. The response data from the SIM shall indicate to the ME whether to send the supplementary service or USSD operation as proposed, not send the SS or USSD operation, send the SS or USSD operation using the data supplied by the SIM, or instead set up a call using the data supplied by the SIM. It is mandatory for the ME to perform the supplementary service or USSD operation or the call set-up request in accordance with the data from the SIM.

\$(release96)\$: Optionally, the ME may indicate to the user that the supplementary service or USSD operation has been barred, changed, or replaced by a call set-up request.

The following two bullet points apply to the \$(TRCC)\$ feature, in the case where the initial SS or USSD request results from a proactive command SEND SS or SEND USSD :

- if the call control result is "not allowed", the ME shall inform the SIM using TERMINAL RESPONSE ("interaction with call control by SIM or MO short message control by SIM, action not allowed").
- if the SS or USSD request is changed by call control in a call set-up request, then the ME shall set up the call using the data given by the SIM. The ME shall then send back a TERMINAL RESPONSE to the initial proactive command at the same time it would have done for the proactive command equivalent to the action requested by call control (i.e. SET UP CALL). However, in that case, the TERMINAL RESPONSE shall contain the response data given in the response to ENVELOPE (CALL CONTROL) and a second Result TLV identical to the one given in response to the proactive command equivalent to the action requested by call control (i.e. SET UP CALL). The mapping between the general result in the first Result TLV and the general result in the second Result TLV is the same as the one described in subclause 9.1.

If the ME supports the Last Number Dialed service, the ME shall update EF<sub>LND</sub> with the supplementary service or USSD control string corresponding to the initial user request.

The ME shall then follow the supplementary service or USSD operation procedure defined in GSM 04.80 [10] or the call set-up procedure defined in GSM 04.08 [8].

### 9.3 Indication to be given to the user

This subclause applies to the release 97 feature, \$(Indication)\$.

The SIM may optionally include an alpha-identifier in the response data to the ENVELOPE (CALL CONTROL) message, in order to inform the user at the time the response is received by the ME. The use of this alpha identifier by the ME is described below :

- if the SIM responds with "allowed, no modification", then :
  - if the alpha identifier is provided by the SIM and is not a null data object, the ME shall use it to inform the user during the call set-up;
  - if the alpha identifier is provided by the SIM and is a null data object (i.e. length = '00' and no value part), this is an indication that the ME should not modify the display corresponding to the initial user request;
  - if the alpha identifier is not provided by the SIM, the ME may give information to the user concerning what is happening;
- if the SIM responds with "not allowed", then:
  - if the alpha identifier is provided by the SIM and is not a null data object, the ME shall use it to inform the user. This is also an indication that the ME should not give any other information to the user on the reason of the barring;
  - if the alpha identifier is provided by the SIM and is a null data object (i.e. length = '00' and no value part), the ME may give information to the user concerning what is happening;
  - if the alpha identifier is not provided by the SIM, the ME may give information to the user concerning what is happening.
- if the SIM responds with "allowed, with modifications", then :
  - if the alpha identifier is provided by the SIM and is not a null data object, the ME shall use it to inform the user. The ME shall then not display the destination address or SS string given by the SIM. This is also an indication that the ME should not give any other information to the user on the changes made by the SIM to the initial user request;
  - if the alpha identifier is provided by the SIM and is a null data object (i.e. length = '00' and no value part), this is an indication that the ME should not give any information to the user on the changes made by the SIM to the initial user request. The ME shall not display the destination address or SS string given by the SIM. The ME should not modify the display corresponding to the initial user request;
  - if the alpha identifier is not provided by the SIM, the ME may indicate to the user that the initial user request has been changed.

## 9.4 Interaction with Fixed Dialling Number

It is permissible for the Fixed Dialling Number service to be enabled (see GSM 11.11 [14]) at the same time as Call Control is allocated and activated in the SIM Service Table.

If FDN is enabled and Call Control is activated, the ME shall follow this procedure:

- The ME shall check that the number (or the supplementary service control string) entered through the MMI is on the FDN list, in accordance with GSM 02.07 [19].
- If the MMI input does not pass the FDN check, the call (or the supplementary service operation) shall not be set up.
- If the MMI input does pass the FDN check, the ME shall pass the dialled digits (or the supplementary service control string) and other parameters to the SIM, using the ENVELOPE (CALL CONTROL) command.
- If the SIM responds with "allowed, no modification", the ME shall set up the call (or the supplementary service operation) as proposed.
- If the SIM responds with "not allowed", the ME shall not set up the call (or the supplementary service operation).
- If the SIM responds with "allowed with modifications", the ME shall set up the call (or supplementary service operation) in accordance with the response from the SIM. If the modifications involve changing the dialled digits (or the supplementary service control string), the ME shall not re-check this modified number (or string) against the FDN list.

If the user wishes to enable or disable Fixed Dialling Number, the ME shall follow the procedure in GSM 11.11 [14]. The state of the Call Control service shall have no effect on this procedure.

## 9.5 Support of Barred Dialling Number (BDN) service

The BDN service shall be allocated and activated in the SIM Service Table only if Call Control is also allocated and activated in the SIM Service Table.

If Barred Dialling Number service is enabled (see GSM 11.11 [14]), when receiving the dialled number (or supplementary service control string) and other parameters from the ME, the SIM may check this information against those stored in EF<sub>BDN</sub> (examples of comparison methods are given in GSM 02.07 [19]).

- If the SIM responds with "not allowed" (e.g., a match is made against a BDN), the ME shall not set up the call (or the supplementary service operation).
- If the SIM responds with "allowed, no modification", the ME shall set up the call (or the supplementary service operation) as proposed.
- If the SIM responds with "allowed with modifications", the ME shall set up the call (or the supplementary service operation) in accordance with the response from the SIM. If the modifications involve changing the dialled number (or the supplementary service control string), the ME shall not re-check this modified number (or string) against the FDN list when FDN is enabled.

If the user wishes to enable or disable Barred Dialling Number, the ME shall follow the procedure in GSM 11.11 [14].

## 9.6 Structure of ENVELOPE (CALL CONTROL)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description                                                                  | Section             | M/O | Min | Length |
|------------------------------------------------------------------------------|---------------------|-----|-----|--------|
| Call control tag                                                             | 13.1                | M   | Y   | 1      |
| Length (A+B+C+D).<br>If \$(cellidCC)\$ is supported, then Length (A+B+C+D+E) | -                   | M   | Y   | 1 or 2 |
| Device identities                                                            | 12.7                | M   | Y   | A      |
| Address<br>or<br>SS string                                                   | 12.1<br>or<br>12.14 | M   | Y   | B      |
| Capability configuration parameters                                          | 12.4                | O   | N   | C      |
| Called party subaddress                                                      | 12.3                | O   | N   | D      |
| \$(cellidCC)\$ : Location information                                        | 12.19               | M   | N   | E      |

- Device identities: the ME shall set the device identities to:

Source: ME  
Destination: SIM

- Address or SS string : only one data object shall be sent to the SIM.

For a call set-up, the address data object is used and holds the Called Party Number, as defined in GSM 04.08 [8], to which the ME is proposing setting up the call.

For a supplementary service or USSD operation, the SS string data object is used and holds the corresponding supplementary service or USSD control string.

- Capability configuration parameters: Only used for a call set-up, this contains the Bearer capabilities that the ME is proposing to send to the network. If this data object is not present, this shall indicate a speech call.
- Called party subaddress: Only used for a call set-up, this contains the called party subaddress that the ME is proposing to send to the network. If one is not present, this shall indicate that the ME is proposing not to send this information element to the network.
- Location information: If \$(CellidCC)\$ is supported, this data object contains the identification (MCC, MNC, LAC, Cell Identity) of the current serving cell of the MS. The comprehension required flag of this data object in this command shall be set to '0'.

Response parameters/data:

It is permissible for the SIM to provide no response data, by responding with SW1 / SW2 = '90 00'. If the SIM does not provide any response data, then this shall have the same meaning as "allowed, no modification".

| Description                                          | Section             | M/O | Min | Length |
|------------------------------------------------------|---------------------|-----|-----|--------|
| Call control result                                  | -                   | M   | Y   | 1      |
| Length (A+B+C)<br>\$(Indication)\$: Length (A+B+C+D) | -                   | M   | Y   | 1 or 2 |
| Address<br>or<br>SS string                           | 12.1<br>or<br>12.14 | O   | N   | A      |
| Capability configuration parameters                  | 12.4                | O   | N   | B      |
| Called party subaddress                              | 12.3                | O   | N   | C      |
| \$(Indication)\$: Alpha identifier                   | 12.2                | O   | N   | D      |

- Call control result:

Contents: the command that the SIM gives to the ME concerning whether to allow, bar or modify the proposed call (or supplementary service operation).

Coding:

'00' = Allowed, no modification  
'01' = Not allowed  
'02' = Allowed with modifications

- Address or SS string : Only one data object may be included if the SIM requests the call (or supplementary service or USSD operation) details to be modified.

For a call set-up, if the address data object is not present, then the ME shall assume the Dialling number is not to be modified.

For a supplementary service or USSD operation, if the SS string data object is not present, then the ME shall assume that SS or USSD operation is not to be modified.

- Capability configuration parameters: Only used for a call set-up, this data object is only required if the SIM requests the call details to be modified. If the capability configuration parameters are not present, then the ME shall assume the parameters are not to be modified.
- Called party subaddress: Only used for a call set-up, this data object is only required if the SIM requests the call details to be modified. If the called party subaddress is not present, then the ME shall assume the subaddress is not to be modified. If the subaddress supplied by the SIM is a null data object, then the ME shall not provide a called party subaddress to the network. A null data object shall have length = '00' and no value part.
- \$(Indication)\$: Alpha identifier: this data object is only required if the SIM requests a particular indication to be given to the user. The handling of this data object by the ME is described in section 9.3. The comprehension required flag of this data object shall be set to '0'.

It is mandatory for the SIM to provide at least one of the optional data objects if it has set the Call control result to "allowed with modifications".

## 10 MO Short Message Control by SIM

This subclause applies to the release 97 feature, \$(MOSMcontrol)\$.

### 10.1 Description

If the service "MO Short Message Control" is allocated and activated in the SIM Service Table (see GSM 11.11 [14]), then the ME shall follow the procedure below:

- For all MO short message attempts (even those resulting from a SEND SM proactive SIM command), the ME shall first pass the RP\_destination\_address of the service center and the TP\_Destination\_Address to the SIM, using the ENVELOPE (MO SHORT MESSAGE CONTROL) command defined below. The ME shall also pass to the SIM in the ENVELOPE (MO SHORT MESSAGE CONTROL) command the current serving cell
- If the SIM responds with '90 00', the ME shall send the short message with the addresses unchanged.
- If the SIM responds with '93 00', the ME shall not send the short message and may retry the command.
- If the SIM responds with '9F XX', the ME shall use the GET RESPONSE command to get the response data. The response data from the SIM shall indicate to the ME whether to send the short message as proposed, not send the short message or send a short message using the data supplied by the SIM. It is mandatory for the ME to perform the MO short message request in accordance with the data from the SIM.

The ME shall then follow the MO Short Message procedure defined in GSM 04.11 [9].

\$(TRCC)\$ In the case where the initial MO short message request results from a proactive command SEND SHORT MESSAGE, if the MO short message control result is "not allowed", the ME shall inform the SIM using TERMINAL RESPONSE ("interaction with call control by SIM or MO short message control by SIM, action not allowed").

### 10.2 Structure of ENVELOPE (MO SHORT MESSAGE CONTROL)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description                  | Section | M/O | Min | Length |
|------------------------------|---------|-----|-----|--------|
| MO Short Message control tag | 13.1    | M   | Y   | 1      |
| Length (A+B+C+D)             | -       | M   | Y   | 1 or 2 |
| Device identities            | 12.7    | M   | Y   | A      |
| Address data object 1        | 12.1    | M   | Y   | B      |
| Address data object 2        | 12.1    | M   | Y   | C      |
| Location information         | 12.19   | M   | Y   | D      |

- Device identities: the ME shall set the device identities to:  
   Source:       ME  
   Destination:  SIM
- Address data object 1 : this address data object 1 contains the RP\_Destination\_Address of the Service Center to which the ME is proposing to send the short message.
- Address data object 2 : this address data object 2 contains the TP\_Destination\_Address to which the ME is proposing to send the short message.
- Location information : this data object contains the identification (MCC, MNC, LAC, Cell Identity) of the current serving cell of the MS.

Response parameters/data:

It is permissible for the SIM to provide no response data, by responding with SW1 / SW2 = '90 00'. If the SIM does not provide any response data, then this shall have the same meaning as "allowed, no modification".

| Description                                      | Section | M/O | Min | Length |
|--------------------------------------------------|---------|-----|-----|--------|
| MO short message control result                  | -       | M   | Y   | 1      |
| Length (A+B)<br>\$(Indication)\$: Length (A+B+C) | -       | M   | Y   | 1 or 2 |
| Address data object 1                            | 12.1    | O   | N   | A      |
| Address data object 2                            | 12.1    | O   | N   | B      |
| \$(Indication)\$: Alpha identifier               | 12.2    | O   | N   | C      |

- MO Short Message control result:  
   Contents: the command that the SIM gives to the ME concerning whether to allow, bar or modify the proposed short message.
- Coding:  
   '00' = Allowed, no modification  
   '01' = Not allowed  
   '02' = Allowed with modifications
- Address data object 1: if the address data object 1 is not present, then the ME shall assume the RP\_Destination\_Address of the Service Center is not to be modified.
- Address data object 2: if the address data object 2 is not present, then the ME shall assume the TP\_Destination\_Address is not to be modified.
- \$(Indication)\$: Alpha identifier: this data object is only required if the SIM requests a particular indication to be given to the user. The handling of this data object by the ME is described in section 10.3.

The SIM shall provide the two optional address data objects if it has set the MO Short Message control result to "allowed with modifications".

## 10.3 Indication to be given to the user

This entire subclause applies only if \$(Indication)\$ is supported.

The SIM may optionally include an alpha-identifier in the response data to the ENVELOPE (MO SHORT MESSAGE CONTROL) message, in order to inform the user at the time the response is received by the ME. The use of this alpha identifier by the ME is identical to the one described in section 9.3 relative to call control by SIM.

# 11 Event download

This subclause applies to the release 97 feature, \$(Event)\$.

A set of events for the ME to monitor can be supplied by the SIM using the proactive command SET UP EVENT LIST. If the SIM has sent this command, and an event which is part of the list subsequently occurs, the ME informs the SIM using the procedure below, relevant for that event.

Processing within the ME resulting from this event shall proceed as normal, independent of sending the ENVELOPE command to the SIM.

Where events occur while the SIM-ME interface is already busy, the ME shall queue events and send event download messages to the SIM in the order in which they occurred.

## 11.1 MT call event

### 11.1.1 Procedure

If the MT call event is part of the current event list (as set up by the last SET UP EVENT LIST command, see section 6.4.16), then when the ME receives an incoming SETUP message, the ME shall inform the SIM that this has occurred, by using the ENVELOPE (EVENT DOWNLOAD - MT call) command as defined below.

### 11.1.2 Structure of ENVELOPE (EVENT DOWNLOAD - MT call)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description             | Section | M/O | Min | Length |
|-------------------------|---------|-----|-----|--------|
| Event download tag      | 13.1    | M   | Y   | 1      |
| Length (A+B+C+D+E)      | -       | M   | Y   | 1 or 2 |
| Event list              | 12.25   | M   | Y   | A      |
| Device identities       | 12.7    | M   | Y   | B      |
| Transaction identifier  | 12.28   | M   | Y   | C      |
| Address                 | 12.1    | M/O | N   | D      |
| Called party subaddress | 12.3    | M/O | N   | E      |

M/O reflects that inclusion of the object is conditional, as defined in the text below.

- Event list: the event list object shall contain only one event (value part of length 1 byte), and ME shall set the event to: MT call
- Device identities: the ME shall set the device identities to:
  - Source: Network
  - Destination: SIM
- Transaction identifier: the transaction identifier data object shall contain one transaction identifier, and this shall be the Transaction Identifier in the SETUP message from the network.
- Address: The address data object holds the Calling Line Identity as received by the ME in the SETUP message. If the Calling Line Identity is included in the SETUP message, the ME shall include the Address object, otherwise the ME shall not include the Address object.
- Called party subaddress: The called party subaddress data object holds the Calling Line Identity Subaddress as received by the ME in the SETUP message. If the Calling Line Identity Subaddress is included in the SETUP message, the ME shall include the Called party subaddress object, otherwise the ME shall not include the called party subaddress object.

Response parameters/data:

None.

## 11.2 Call connected event

### 11.2.1 Procedure

If the call connected event is part of the current event list (as set up by the last SET UP EVENT LIST command, see section 6.4.16), then when the ME receives an incoming CONNECT message (in the case of an MO call), or when the ME sends an outgoing CONNECT message (in the case of an MT call), the ME shall inform the SIM that this has occurred, by using the ENVELOPE (EVENT DOWNLOAD - call connected) command as defined below.

In the case of a call initiated through a SET UP CALL proactive command while the call connected event is part of the current event list, the ME shall send both the TERMINAL RESPONSE related to the proactive command, and the EVENT DOWNLOAD command, in the order TERMINAL RESPONSE first, ENVELOPE(EVENT DOWNLOAD - call connected) second.

### 11.2.2 Structure of ENVELOPE (EVENT DOWNLOAD - call connected)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description            | Section | M/O | Min | Length |
|------------------------|---------|-----|-----|--------|
| Event download tag     | 13.1    | M   | Y   | 1      |
| Length (A+B+C)         | -       | M   | Y   | 1 or 2 |
| Event list             | 12.25   | M   | Y   | A      |
| Device identities      | 12.7    | M   | Y   | B      |
| Transaction identifier | 12.28   | M   | Y   | C      |

- Event list: the event list object shall contain only one event (value part of length 1 byte), and ME shall set the event to:  
Call connected
- Device identities:  
In the case of connecting at the near end (an MT call), the ME shall set the device identities to:  
Source: ME  
Destination: SIM  
  
In the case of connecting at the far end (an MO call), the ME shall set the device identities to:  
Source: Network  
Destination: SIM
- Transaction identifier: the transaction identifier data object shall contain one transaction identifier, and this shall be the Transaction Identifier in the CONNECT message.

Response parameters/data:

None.

## 11.3 Call disconnected event

### 11.3.1 Procedure

If the call disconnected event is part of the current event list (as set up by the last SET UP EVENT LIST command, see section 6.4.16), then if the ME is not in the CC U0 (NULL) state (i.e. has sent or received a SETUP message, see TS GSM 04.08 [8]), and in this state disconnects a call, the ME shall inform the SIM that this has occurred, by using the ENVELOPE (EVENT DOWNLOAD - call disconnected) command as defined below. This can happen as the result of the ME sending or receiving a DISCONNECT, RELEASE, or RELEASE COMPLETE message, or as the result of a radio link failure; if more than one of these occur within the same call, the ENVELOPE command shall be sent on the first occurrence.

If the ME initiates the disconnection, or in the case of radio link failure, this is considered a "near end" disconnection, whereas a "far end" disconnection is defined as when the network initiates the disconnection. The ME shall set the Device Identities accordingly.

### 11.3.2 Structure of ENVELOPE (EVENT DOWNLOAD - Call disconnected)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description            | Section | M/O | Min | Length |
|------------------------|---------|-----|-----|--------|
| Event download tag     | 13.1    | M   | Y   | 1      |
| Length (A+B+C+D)       | -       | M   | Y   | 1 or 2 |
| Event list             | 12.25   | M   | Y   | A      |
| Device identities      | 12.7    | M   | Y   | B      |
| Transaction identifier | 12.28   | M   | Y   | C      |
| Cause                  | 12.26   | O   | N   | D      |

- Event list: the event list object shall contain only one event (value part of length 1 byte), and ME shall set the event to: Call disconnected
- Device identities:  
In the case of "near end" disconnection, the ME shall set the device identities to:  
Source: ME  
Destination: SIM  
  
In the case of "far end" disconnection, the ME shall set the device identities to:  
Source: Network  
Destination: SIM
- Transaction identifier: the transaction identifier data object shall contain a list of the transaction identifiers for each of the calls being disconnected.
- Cause: the cause shall reflect the CC-Cause information element sent or received in the DISCONNECT, RELEASE or RELEASE COMPLETE message (see TS GSM 04.08 [8]) triggering the ENVELOPE command. If the Cause information element was not present in the message, or the Cause data object shall not be included. In the case of a radio link timeout, the Cause data object shall be included, with a value part of zero length.

Response parameters/data:

None.

## 11.4 Location status event

### 11.4.1 Procedure

If the location status event is part of the current event list (as set up by the last SET UP EVENT LIST command, see section 6.4.16), then when the ME enters the MM-IDLE state (see TS GSM 04.08 [8]) with the result that either the Location status or Location information has been changed or updated, the ME shall inform the SIM that this has occurred, by using the ENVELOPE (EVENT DOWNLOAD - location status) command as defined below

### 11.4.2 Structure of ENVELOPE (EVENT DOWNLOAD - Location status)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description          | Section | M/O | Min | Length |
|----------------------|---------|-----|-----|--------|
| Event download tag   | 13.1    | M   | Y   | 1      |
| Length (A+B+C+D)     | -       | M   | Y   | 1 or 2 |
| Event list           | 12.25   | M   | Y   | A      |
| Device identities    | 12.7    | M   | Y   | B      |
| Location status      | 12.27   | M   | Y   | C      |
| Location information | 12.19   | M/O | N   | D      |

M/O reflects that inclusion of the object is conditional, as defined in the text below.

- Event list: the event list object shall contain only one event (value part of length 1 byte), and ME shall set the event to:  
Location status
- Device identities: the ME shall set the device identities to:  
Source: ME  
Destination: SIM
- Location status: This object shall contain the current service state of the MS.
- Location information: This object shall only be included if the Location status object indicates Normal Service. This object shall contain the details of the network, location area and cell that have been selected.

Response parameters/data:

None.

## 11.5 User activity event

### 11.5.1 Procedure

If the user activity event is part of the current event list (as set up by the last SET UP EVENT LIST command, see section 6.4.16), then the ME shall follow the procedure below:

- When the ME next detects some user activity (e.g. a key-press, removal of key-lock), the ME shall inform the SIM that this has occurred, by using the ENVELOPE (EVENT DOWNLOAD - user activity) command as defined below.
- As a result of sending this command to the SIM, the ME shall remove the user activity event from its current event list. This is in order for the ME to report this event only once after the event has been requested by the SIM.

### 11.5.2 Structure of ENVELOPE (EVENT DOWNLOAD - User activity)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description        | Section | M/O | Min | Length |
|--------------------|---------|-----|-----|--------|
| Event download tag | 13.1    | M   | Y   | 1      |
| Length (A+B)       | -       | M   | Y   | 1 or 2 |
| Event list         | 12.25   | M   | Y   | A      |
| Device identities  | 12.7    | M   | Y   | B      |

- Event list: the event list object shall contain only one event (value part of length 1 byte), and ME shall set the event to: User activity
- Device identities: the ME shall set the device identities to:
  - Source: ME
  - Destination: SIM

Response parameters/data:

None.

## 11.6 Idle screen available event

### 11.6.1 Procedure

If the idle screen available event is part of the current event list (as set up by the last SET UP EVENT LIST command, see section 6.4.16), then the ME shall follow the procedure below:

- When the ME next enters a state where it would accept rather than reject a DISPLAY TEXT command of normal priority, the ME shall inform the SIM that this has occurred, by using the ENVELOPE (EVENT DOWNLOAD - idle screen available) command as defined below.
- As a result of sending this command to the SIM, the ME shall remove the idle screen available event from its current event list. This is in order for the ME to report this event only once after the event has been requested by the SIM.

### 11.6.2 Structure of ENVELOPE (EVENT DOWNLOAD - Idle screen available)

Direction: ME to SIM

The command header is specified in GSM 11.11 [14].

Command parameters/data:

| Description        | Section | M/O | Min | Length |
|--------------------|---------|-----|-----|--------|
| Event download tag | 13.1    | M   | Y   | 1      |
| Length (A+B)       | -       | M   | Y   | 1 or 2 |
| Event list         | 12.25   | M   | Y   | A      |
| Device identities  | 12.7    | M   | Y   | B      |

- Event list: the event list object shall contain only one event (value part of length 1 byte), and ME shall set the event to: Idle screen available
- Device identities: the ME shall set the device identities to:
  - Source: Display
  - Destination: SIM

Response parameters/data:

None.

## 12 SIMPLE-TLV data objects

This clause specifies the coding of the SIMPLE-TLV data objects, which are contained in a BER-TLV data object. SIMPLE-TLV data objects may be transferred across the interface in either direction. A SIMPLE-TLV data object consists of a tag of length one byte, a length indicator, which gives the number of bytes in the value field, and a value part of variable length, whose contents, meaning and coding are given below.

Tag codings are given in subclause 13.3 for all SIMPLE-TLV data objects.

'00' and 'FF' are never used as tag values for SIMPLE-TLVs. This is in alignment with ISO/IEC 7816-6 [17]. Padding characters are not allowed.

For some of the SIMPLE-TLV data objects described, the length field shall be coded on 1 or 2 bytes (Y value) according to annex D, depending on the value of byte 1.

All bits and bytes indicated as RFU within all SIMPLE-TLV data objects shall be respectively set to 0 and '00' by the sending entity.

The handling of reserved values and RFU bits or bytes within all SIMPLE-TLV data objects at the receiving entity is described in subclause 6.10.

### 12.1 Address

| Byte(s)              | Description            | Length |
|----------------------|------------------------|--------|
| 1                    | Address tag            | 1      |
| 2 to (Y-1)+2         | Length (X)             | Y      |
| (Y-1)+3              | TON and NPI            | 1      |
| (Y-1)+4 to (Y-1)+X+2 | Dialling number string | X-1    |

TON/NPI is coded as for  $EF_{ADN}$ .

Dialling number string is coded as for  $EF_{ADN}$ , and may include DTMF separators and DTMF digits, which the ME shall send in the same way as for  $EF_{ADN}$ .

See GSM 11.11 [14] for the coding of all EFs.

### 12.2 Alpha identifier

| Byte(s)              | Description          | Length |
|----------------------|----------------------|--------|
| 1                    | Alpha identifier tag | 1      |
| 2 to (Y-1)+2         | Length (X)           | Y1     |
| (Y-1)+3 to (Y-1)+X+2 | Alpha identifier     | X      |

The alpha identifier is coded as for  $EF_{ADN}$ .

See GSM 11.11 [14] for the coding of all EFs.

### 12.3 Called party subaddress

| Byte(s)              | Description                 | Length |
|----------------------|-----------------------------|--------|
| 1                    | Called party subaddress tag | 1      |
| 2 to (Y-1)+2         | Length (X)                  | Y      |
| (Y-1)+3 to (Y-1)+X+2 | Called party subaddress     | X      |

Called party subaddress contains information as defined for this purpose in GSM 04.08 [8]. All information defined in GSM 04.08 shall be given in the value part of the data object, except the information element identifier and the length of called party subaddress contents (which is given by the length part of the data object).

## 12.4 Capability configuration parameters

| Byte(s)              | Description                             | Length |
|----------------------|-----------------------------------------|--------|
| 1                    | Capability configuration parameters tag | 1      |
| 2 to (Y-1)+2         | Length (X)                              | Y      |
| (Y-1)+3 to (Y-1)+X+2 | Capability configuration parameters     | X      |

Capability configuration parameters are coded as for EF<sub>CCP</sub>. If it is being provided by the SIM, the SIM shall supply all information required to complete the Bearer Capability Information Element in the Call Set-up message (see GSM 04.08 [8]). Any unused bytes at the end of the value part shall be coded 'FF'.

See GSM 11.11 [14] for the coding of all EFs.

## 12.5 Cell Broadcast Page

| Byte(s) | Description                | Length |
|---------|----------------------------|--------|
| 1       | Cell Broadcast page tag    | 1      |
| 2       | Length = '58' (88 decimal) | 1      |
| 3 - 90  | Cell Broadcast page        | 88     |

The Cell Broadcast page is formatted in the same way as described in GSM 03.41 [7].

## 12.6 Command details

| Byte(s) | Description         | Length |
|---------|---------------------|--------|
| 1       | Command details tag | 1      |
| 2       | Length = '03'       | 1      |
| 3       | Command number      | 1      |
| 4       | Type of command     | 1      |
| 5       | Command Qualifier   | 1      |

- Command number

For contents and coding, see subclause 6.5.1.

- Type of command:

Contents: The Type of Command specifies the required interpretation of the data objects which follow, and the required ME procedure.

Coding:

See section 13.4

The ME shall respond to reserved values (i.e. values not listed) with the result "Command type not understood".

- Command Qualifier:

Contents: Qualifiers specific to the command.

Coding:

- REFRESH;
  - '00' = SIM Initialization and Full File Change Notification;
  - '01' = File Change Notification;
  - '02' = SIM Initialization and File Change Notification;
  - '03' = SIM Initialization;
  - '04' = SIM Reset;
  - '05' to 'FF' = reserved values.

- MORE TIME;  
This byte is RFU.
- POLL INTERVAL;  
This byte is RFU.
- POLLING OFF;  
This byte is RFU.
- SET UP CALL;  
  - '00' = set up call, but only if not currently busy on another call;
  - '01' = set up call, but only if not currently busy on another call, with redial;
  - '02' = set up call, putting all other calls (if any) on hold;
  - '03' = set up call, putting all other calls (if any) on hold, with redial;
  - '04' = set up call, disconnecting all other calls (if any);
  - '05' = set up call, disconnecting all other calls (if any), with redial;
  - '06' to 'FF' = reserved values.
- SET UP EVENT LIST;  
This byte is RFU, if \$(Event)\$ is supported.
- SEND SS;  
This byte is RFU.
- SEND USSD;  
This byte is RFU.
- SEND SHORT MESSAGE;  
  - bit 1: 0 = packing not required  
1 = SMS packing by the ME required
  - bits 2-8: = 0 RFU.
- PLAY TONE;  
This byte is RFU.
- DISPLAY TEXT,  
  - bit 1: 0 = normal priority  
1 = high priority
  - bits 2-7: = RFU
  - bit 8: 0 = clear message after a delay  
1 = wait for user to clear message
- GET INKEY,  
  - bit 1 0 = digits (0-9, \*, # and +) only  
1 = alphabet set;
  - bit 2 0 = SMS default alphabet  
1 = UCS2 alphabet if \$(UCS2)\$ is supported
  - bits 3-7: = RFU
  - bit 8: 0 = no help information available and if \$(HelpInfo)\$ is supported  
1 = help information available and if \$(HelpInfo)\$ is supported  
RFU if \$(HelpInfo)\$ not supported
- GET INPUT,  
  - bit 1 0 = digits (0-9, \*, #, and +) only  
1 = alphabet set
  - bit 2 0 = SMS default alphabet  
1 = UCS2 alphabet if \$(UCS2)\$ is supported
  - bit 3: 0 = ME may echo user input on the display  
1 = user input shall not be revealed in any way (see note)
  - bit 4: 0 = user input to be in unpacked format  
1 = user input to be in SMS packed format
  - bits 5 to 7: = RFU
  - bit 8: 0 = no help information available and if \$(HelpInfo)\$ is supported  
1 = help information available and if \$(HelpInfo)\$ is supported

RFU if \$(HelpInfo)\$ is not supported

NOTE: Where user input is not to be revealed, the ME may provide an indication of key entries, such as by displaying "\*"s. See subclause 6.4.3 for more information on the character set available in this mode.

- SELECT ITEM.
  - bits 1 to 7: = RFU
  - bit 8: 0 = no help information available and if \$(HelpInfo)\$ is supported  
1 = help information available and if \$(HelpInfo)\$ is supported  
RFU if \$(HelpInfo)\$ is not supported
- SET UP MENU.
  - bits 1 to 7 = RFU
  - bit 8 0 = no help information available and if \$(HelpInfo)\$ is supported  
1 = help information available and if \$(HelpInfo)\$ is supported  
RFU if \$(HelpInfo)\$ is not supported

#### PROVIDE LOCAL INFORMATION

- '00' = Location Information (MCC, MNC, LAC and Cell Identity)
- '01' = IMEI of the ME
- '02' = Network Measurement results, if \$(NMR)\$ is supported
- '03' to 'FF' = Reserved

The ME shall respond to reserved values with the result "Command type not understood".

## 12.7 Device identities

| Byte(s) | Description                 | Length |
|---------|-----------------------------|--------|
| 1       | Device identities tag       | 1      |
| 2       | Length = '02'               | 1      |
| 3       | Source device identity      | 1      |
| 4       | Destination device identity | 1      |

- Source device identity  
Contents: the source device for information held in the data objects which follow.
- Destination device identity  
Contents: the destination device for information held in the data objects which follow.

NOTE: Only some combinations of Type of Command, Data Download type and Device identities are allowed. These are defined in clause 14.

Coding: both Source and Destination device identities are coded as follows:

- '01' = Keypad
  - '02' = Display
  - '03' = Earpiece
  - '81' = SIM
  - '82' = ME
  - '83' = Network
- All other values are reserved.

## 12.8 Duration

| Byte(s) | Description   | Length |
|---------|---------------|--------|
| 1       | Duration tag  | 1      |
| 2       | Length = '02' | 1      |
| 3       | Time unit     | 1      |
| 4       | Time interval | 1      |

- Time unit

Contents: time unit used; minutes, seconds or tenths of seconds.

Coding:

'00' Minutes

'01' Seconds

'02' Tenths of seconds

All other values are reserved.

- Time interval

Contents: the length of time required, expressed in units.

Coding: The time interval is coded in integer multiples of the time unit used. The range is from 1 unit to 255 units. The encoding is:

- '00': reserved

- '01': 1 unit

- '02': 2 units

- : :

- 'FF': 255 units

## 12.9 Item

| Byte(s)              | Description         | Length |
|----------------------|---------------------|--------|
| 1                    | Item tag            | 1      |
| 2 to (Y-1)+2         | Length (X)          | Y      |
| (Y-1)+3              | Identifier of item  | 1      |
| (Y-1)+4 to (Y-1)+X+2 | Text string of item | X - 1  |

The identifier is a single byte between '01' and 'FF'. Each item shall have a unique identifier within an Item list.

The text string is coded in the same way as the alpha identifier for  $EF_{ADN}$ . Any unused bytes at the end of the value part shall be coded 'FF'.

## 12.10 Item identifier

| Byte(s) | Description               | Length |
|---------|---------------------------|--------|
| 1       | Item identifier tag       | 1      |
| 2       | Length = '01'             | 1      |
| 3       | Identifier of item chosen | 1      |

The identifier is a single byte between '01' and 'FF', exactly the same as for the Item data object. A null item identifier is coded '00'.

## 12.11 Response length

| Byte(s) | Description                | Length |
|---------|----------------------------|--------|
| 1       | Response length tag        | 1      |
| 2       | Length = '02'              | 1      |
| 3       | Minimum length of response | 1      |
| 4       | Maximum length of response | 1      |

The range of length is between '00' and 'FF'. A minimum length coding of '00' indicates that there is no minimum length requirement; a maximum length coding of 'FF' indicates that there is no maximum length requirement. If a fixed length is required the minimum and maximum values are identical.

## 12.12 Result

| Byte(s)              | Description                      | Length |
|----------------------|----------------------------------|--------|
| 1                    | Result tag                       | 1      |
| 2 to (Y-1)+2         | Length (X)                       | Y      |
| (Y-1)+3              | General result                   | 1      |
| (Y-1)+4 to (Y-1)+X+2 | Additional information on result | X-1    |

- General result

Contents: General result specifies the result and indicates appropriate SIM action:

Coding:

- '00' = Command performed successfully;
- '01' = Command performed with partial comprehension;
- '02' = Command performed, with missing information;
- '03' = REFRESH performed with additional EFs read;
- '04' = RFU
- '05' = Command performed, but modified by call control by SIM; \$(TRCC)\$
- '10' = Proactive SIM session terminated by the user;
- '11' = Backward move in the proactive SIM session requested by the user;
- '12' = No response from user;
- '13' = Help information required by the user. \$(HelpInfo)\$

Results '0X' and '1X' indicate that the command has been performed.

- '20' = ME currently unable to process command;
- '21' = Network currently unable to process command;
- '22' = User did not accept call set-up request;
- '23' = User cleared down call before connection or network release;
- '24' = RFU;
- '25' = Interaction with call control by SIM, temporary problem. \$(TRCC)\$

Results '2X' indicate to the SIM that it may be worth re-trying the command at a later opportunity.

- '30' = Command beyond ME's capabilities;
- '31' = Command type not understood by ME;
- '32' = Command data not understood by ME;
- '33' = Command number not known by ME;
- '34' = SS Return Error;
- '35' = SMS RP-ERROR;
- '36' = Error, required values are missing.
- '37' = USSD Return Error. \$(SendUSSD)\$
- '38' = RFU;
- '39' = Interaction with call control by SIM or MO short message control by SIM, permanent problem. \$(TRCC)\$

Results '3X' indicate that it is not worth the SIM re-trying with an identical command, as it will only get the same response. However, the decision to retry lies with the SIM application.

The SIM application should avoid a rapid sequence of repeated retried commands as this may be detrimental to ME performance.

All other values are reserved.

- Additional information

Contents: For the general result "Command performed successfully", some proactive commands require additional information in the command result. This is defined in the subclauses below. For the general results '20', '21', '34', '35', '37' and '39', it is mandatory for the ME to provide a specific cause value as additional information, as defined in the subclauses below. For the other general results, the ME may optionally supply additional information. If additional information is not supplied, then the length of the value part of the data object need only contain the general result.

### 12.12.1 Additional information for SEND SS

When the ME issues a successful COMMAND RESULT for a SEND SS proactive command, it shall also include the Operation Code and Parameters included in the Return Result component from the network, as additional information.

The first byte of the additional information shall be the SS Return Result Operation code, as defined in GSM 04.80 [10].

The rest of the additional information shall be the SS Return Result Parameters, as defined in GSM 04.80 [10].

### 12.12.2 Additional information for ME problem

For the general result "ME currently unable to process command", it is mandatory for the ME to provide additional information, the first byte of which to be as defined below:

- '00' = No specific cause can be given;
- '01' = Screen is busy;
- '02' = ME currently busy on call;
- '03' = ME currently busy on SS transaction;
- '04' = No service;
- '05' = Access control class bar;
- '06' = Radio resource not granted;
- '07' = Not in speech call.
- '08' = ME currently busy on USSD transaction

All other values shall be interpreted by the SIM as '00'. The coding '00' shall only be used by the ME if no others apply.

### 12.12.3 Additional information for network problem

For the general result "network currently unable to process command", it is mandatory for the ME to provide additional information. The first byte shall be the cause value of the Cause information element returned by the network (as defined in GSM 04.08 [8]). Bit 8 shall be set to '1'. One further value is defined:

- '00' = No specific cause can be given.

All other values shall be interpreted by the SIM as '00'. The coding '00' shall only be used by the ME if no others apply.

### 12.12.4 Additional information for SS problem

For the general result "SS Return Error", it is mandatory for the ME to provide additional information. The first byte shall be the error value given in the Facility (Return result) information element returned by the network (as defined in GSM 04.80 [10]). One further value is defined:

- '00' = No specific cause can be given.

All other values shall be interpreted by the SIM as '00'. The coding '00' shall only be used by the ME if no others apply.

### 12.12.5 Additional information for SMS problem

For the general result "SMS RP-ERROR", it is mandatory for the ME to provide additional information. The first byte shall be the cause value given in the RP-Cause element of the RP-ERROR message returned by the network (as defined in GSM 04.11 [9]), with bit 8 = 0. One further value is defined:

- '00' = No specific cause can be given.

All other values shall be interpreted by the SIM as '00'. Specific cause '00' shall only be used by the ME if no others apply.

### 12.12.6 Not used

### 12.12.7 Additional information for USSD problem

This subclause applies if \$(SendUSSD)\$ is supported

For the general result "USSD Return Error", the ME shall provide additional information. The first byte shall be the error value given in the Facility (Return result) information element returned by the network (as defined in GSM 04.80 [10]). One further value is defined:

- '00' = No specific cause can be given.

All other values shall be interpreted by the SIM as '00'.

The coding '00' shall only be used by the ME if no others apply.

## 12.12.8 Additional information for interaction with call control or MO SM control

This subclause applies the release 97 feature, \$(TRCC)\$.

For the general result "interaction with call control by SIM or MO short message control by SIM, permanent problem", it is mandatory for the ME to provide additional information, the first byte of which to be as defined below:

- '00' = No specific cause can be given;
- '01' = Action not allowed;
- '02' = The type of request has changed

All other values shall be interpreted by the SIM as '00'. The coding '00' shall only be used by the ME if no others apply.

## 12.13 SMS TPDU

| Byte(s)                 | Description  | Length |
|-------------------------|--------------|--------|
| 1                       | SMS TPDU tag | 1      |
| 2 to (Y-1)+2            | Length (X)   | Y      |
| (Y-1)+3 to<br>(Y-1)+X+2 | SMS TPDU     | X      |

The TPDU is formatted as described in GSM 03.40 [6].

Where the TPDU is being sent from the SIM to the ME (to be forwarded to the network), and where it includes a TP-Message-Reference which is to be incremented by the ME for every outgoing message, the TP-Message-Reference as provided by the SIM need not be the valid value. TP-Message-Reference shall be checked and corrected by the ME to the value described in GSM 03.40 [6].

## 12.14 SS string

| Byte(s)                 | Description       | Length |
|-------------------------|-------------------|--------|
| 1                       | SS string tag     | 1      |
| 2 to (Y-1)+2            | Length (X)        | Y      |
| (Y-1)+3                 | TON and NPI       | 1      |
| (Y-1)+4 to<br>(Y-1)+X+2 | SS or USSD string | X - 1  |

TON/NPI and SS or USSD control string are coded as for EF<sub>ADN</sub>, where the ADN record relates to a Supplementary Service Control string. See GSM 11.11 [14] for the coding of EF<sub>ADN</sub>.

## 12.15 Text string

| Byte(s)                 | Description        | Length |
|-------------------------|--------------------|--------|
| 1                       | Text string tag    | 1      |
| 2 to (Y-1)+2            | Length (X)         | Y      |
| (Y-1)+3                 | Data coding scheme | 1      |
| (Y-1)+4 to<br>(Y-1)+X+2 | Text string        | X-1    |

A null text string shall be coded with Length = '00', and no Value part.

Data coding scheme is coded as for SMS Data coding scheme defined in GSM 03.38 [5].

### 12.15.1 Coding of text in unpacked format

This is indicated by the data coding scheme having a value of 8 bit data. Other parts of the data coding scheme shall be ignored.

This string shall be no longer than 160 characters, and use the SMS default 7-bit coded alphabet as defined in GSM 03.38 [5] with bit 8 set to 0. It may or may not include formatting characters, but all such formatting characters shall be taken from the set given in the SMS alphabet.

NOTE: This is exactly the same format as is used for EF<sub>ADN</sub> alpha-identifiers. It is also the same as SMS messages that have been "unpacked".

### 12.15.2 Coding of text in packed format

This is indicated by the data coding scheme having a value of 7 bit GSM default alphabet. Other parts of the data coding scheme shall be ignored.

This string shall be no longer than 160 characters, and use the SMS default 7-bit coded alphabet, packed into 8-bit octets, as defined in GSM 03.38 [5]. It may or may not include formatting characters, but all such formatting characters shall be taken from the set given in the SMS alphabet.

If the total number of characters in the text string equals  $(8n-1)$  where  $n=1,2,3$  etc. then there are 7 spare bits at the end of the message. To avoid the situation where the receiving entity confuses 7 binary zero pad bits as the @ character, the carriage return (i.e. <CR>) character shall be used for padding in this situation, as defined in GSM 03.38 [5].

NOTE: This is the same format as is used in SMS messages to and from the network.

### 12.15.3 Coding of text in 16 bits UCS2 alphabet format

This subclause applies only if \$(UCS2)\$ is supported.

This is indicated by the data coding scheme having a value of 16 bit UCS2 alphabet. Other parts of the data coding scheme shall be ignored.

This string shall be no longer than 140 bytes, i.e. up to 70 UCS2 characters and use the UCS2 alphabet if the \$(UCS2)\$ is supported, as defined in GSM 03.38 [5]. It may or may not include formatting characters, but all such formatting characters shall be taken from the set given in the UCS2 alphabet.

NOTE: This is the same format as is used in SMS messages to and from the network.

## 12.16 Tone

| Byte(s) | Description   | Length |
|---------|---------------|--------|
| 1       | Tone tag      | 1      |
| 2       | Length = '01' | 1      |
| 3       | Tone          | 1      |

- Tone

Contents: Tones can be either the standard supervisory tone, as defined in GSM 02.40 [18], or proprietary tones defined by the ME manufacturer. The code values for proprietary tones shall be supported by the ME. If proprietary tones are not supported the ME shall map these codings to tones that it can generate. The tones to be used are left as an implementation decision by the manufacturer.

## Coding:

Standard supervisory tones:

- '01' Dial tone
- '02' Called subscriber busy
- '03' Congestion
- '04' Radio path acknowledge
- '05' Radio path not available / Call dropped
- '06' Error / Special information
- '07' Call waiting tone
- '08' Ringing tone

ME proprietary tones:

- '10' General beep
- '11' Positive acknowledgement tone
- '12' Negative acknowledgement or error tone

All other values are reserved.

## 12.17 USSD string

This subclause applies to the release 97 feature, \$(SendUSSD)\$.

| Byte(s) | Description     | Length |
|---------|-----------------|--------|
| 1       | USSD string tag | 1      |
| 2       | Length (X)      | 1      |
| 3 - X+2 | USSD string     | X      |

The coding of the USSD string is defined in GSM 02.30 [4].

## 12.18 File List

| Byte(s)              | Description                   | Length |
|----------------------|-------------------------------|--------|
| 1                    | File List tag                 | 1      |
| 2 to (Y-1)+2         | Length (X) of bytes following | Y      |
| (Y-1)+3              | Number of files (n)           | 1      |
| (Y-1)+4 to (Y-1)+X+2 | Files                         | X-1    |

Number of files:

This is the number of files that will be described in the following list.

Files:

Full paths are given to files. Each of these shall be at least 4 octets in length (e.g. '3F002FE2' or '3F007F206FAD'). Each entry in the file description is composed of two bytes, where the first byte identifies the type of file (see GSM 11.11).

An entry in the file description shall therefore always begin with '3FXX'. There can be any number of Dedicated File entries between the Master File and Elementary File. There shall be no delimiters between files, as this is implied by the fact that the full path to any EF starts with '3FXX' and ends with an Elementary type file.

## 12.19 LOCATION INFORMATION

| Byte(s) | Description                                | Length |
|---------|--------------------------------------------|--------|
| 1       | Location Information tag                   | 1      |
| 2       | Length = '07'                              | 1      |
| 3 - 5   | Mobile Country & Network Codes (MCC & MNC) | 3      |
| 6 - 7   | Location Area Code (LAC)                   | 2      |
| 8 - 9   | Cell Identity Value (Cell ID)              | 2      |

The mobile country code (MCC), the mobile network code (MNC), the location area code (LAC) and the cell ID are coded as in GSM 04.08 [8].

## 12.20 IMEI

| Byte(s) | Description    | Length |
|---------|----------------|--------|
| 1       | IMEI tag       | 1      |
| 2       | Length = '08'  | 1      |
| 3 - 10  | IMEI of the ME | 8      |

The IMEI is coded as in GSM 04.08 [8].

## 12.21 Help Request

This subclause applies to the release 97 feature, \$(HelpInfo)\$.

| Byte(s) | Description      | Length |
|---------|------------------|--------|
| 1       | Help Request tag | 1      |
| 2       | Length = '00'    | 1      |

## 12.22 Network Measurement Results

This subclause applies to the release 97 feature, \$(NMR)\$.

| Byte(s) | Description                     | Length |
|---------|---------------------------------|--------|
| 1       | Network Measurement Results tag | 1      |
| 2       | Length = '10'                   | 1      |
| 3 - 18  | Network Measurement Results     | 16     |

The Network Measurement Results are coded as for the Measurement Results information element in GSM 04.08 [8], starting at octet 2 (the IEI is removed, as this information is duplicated by the data object tag).

## 12.23 Default Text

This subclause applies to the release 97 feature, \$(DefChoice)\$.

The coding of this data object is the same as for the Text String data object (see subclause 12.15) with the exception that the Default Text tag has a specific value (see subclause 13.3).

## 12.24 Items Next Action Indicator

This subclause applies to the release 97 feature, \$(NextAction)\$.

| Byte(s)    | Description                      | Length |
|------------|----------------------------------|--------|
| 1          | Items Next Action Indicator tag  | 1      |
| 2          | Length (X)                       | 1      |
| 3 to 3+X-1 | Items Next Action Indicator list | X      |

Contents : Each item of a list of items has a next action indicator coded on one byte. The length of the

Items Next Action Indicator list shall be the number of items of the list of items (X shall be the number of items in the list). The order of each item next action indicator, shall reflect the order of the items in the list of items.

The Item Next action indicator gives the possible actions that will be initiated by the SIM in case of selection by the user.

Coding : If the value is equal to '00' or if the value is reserved (that is, value not listed), the ME shall ignore the next action indicator type.

See subclause 13.4 for further information.

Example :

For the following list of items :

- item #1;
- item #2;
- item #3;
- ....
- item #n,

the Items Next Action Indicator (NAI) shall be as follows :

|     |        |       |       |       |     |       |
|-----|--------|-------|-------|-------|-----|-------|
| Tag | Length | NAI#1 | NAI#2 | NAI#3 | ... | NAI#n |
|-----|--------|-------|-------|-------|-----|-------|

## 12.25 Event list

This subclause applies to the release 97 feature, \$(Event)\$.

| Byte(s)      | Description                   | Length |
|--------------|-------------------------------|--------|
| 1            | Event list tag                | 1      |
| 2 to Y+1     | Length (X) of bytes following | Y      |
| Y+2 to X+Y+1 | Event list                    | X      |

- Event list

Contents: A list of events, of variable length. Each byte in the list defines an event. Each event type shall not appear more than once within the list.

Coding: Each byte in the event list shall be coded with one of the values below:

- '00' = MT call
- '01' = Call connected
- '02' = Call disconnected
- '03' = Location status
- '04' = User activity
- '05' = Idle screen available

## 12.26 Cause

This subclause applies to the release 97 feature, \$(Event)\$.

| Byte(s)  | Description                                                    | Length |
|----------|----------------------------------------------------------------|--------|
| 1        | Cause tag                                                      | 1      |
| 2        | Length (X) of bytes following. $X=0$ , or $2 \leq X \leq 30$ . | 1      |
| 3 to X+2 | Cause                                                          | X      |

The Cause data object is coded as for the Cause call control information element in GSM 04.08 [8], starting at octet 3 (the IEI and Length information are removed, as this information is duplicated by the data object tag and length).

Radio Link Timeout is indicated by the Cause data object having a value part of zero length (only the Tag and Length components are sent).

## 12.27 Location status

This subclause applies to the release 97 feature, \$(Event)\$.

| Byte(s) | Description                   | Length |
|---------|-------------------------------|--------|
| 1       | Location status tag           | 1      |
| 2       | Length (X) of bytes following | 1      |
| 3       | Location status               | 1      |

- Location status

Contents: this data object indicates the current service state of the MS.

- "Normal service" shall indicate that the MS is in a state where all requests for services are treated normally.
- "Limited service" shall indicate that the MS is in a state where only emergency call services are offered.
- "No service" shall indicate that the MS is in a state where no services are offered.

Coding: Each byte in the event list shall be coded with one of the values below:

- '00' = Normal service
- '01' = Limited service
- '02' = No service

## 12.28 Transaction identifier

This subclause applies to the release 97 feature, \$(Event)\$.

| Byte(s)  | Description                   | Length |
|----------|-------------------------------|--------|
| 1        | Location status tag           | 1      |
| 2        | Length (X) of bytes following | 1      |
| 3 to X+2 | Transaction identifier list   | X      |

- Transaction identifier list

Contents: A list of transaction identifiers, of variable length. Each byte in the list defines a transaction identifier. Each transaction identifier shall not appear more than once within the list.

Coding: Each byte in the transaction identifier list shall be coded as defined below:

- bits 1 to 4 = RFU
- bits 5 to 7 = TI value
- bit 8 = TI flag

TI value and TI flag are coded as defined in GSM 04.07 [23].

## 12.29 BCCH channel list

This subclause applies to the release 97 feature, \$(NMR)\$.

| Byte(s)  | Description                   | Length |
|----------|-------------------------------|--------|
| 1        | BCCH channel list tag         | 1      |
| 2        | Length (X) of bytes following | 1      |
| 3 to X+2 | BCCH channel list             | X      |

- BCCH channel list

Contents: the list of absolute RF channels for BCCH carriers, as known by the ME from the SYSTEM INFORMATION messages. The BCCH channel list is composed of one to three BCCH channel sub lists, each sub list is derived from the set of frequencies defined by reference neighbour cells description information element or elements. In the latter case the set is the union of the different subsets defined by the neighbour cells description information elements. The length X is therefore 16 bytes (one sub list), 32 bytes (two sub lists) or 48 bytes (three sub lists). See the description of the measurement result information element in GSM 04.08 [8] for more details.

Coding: as for the neighbour cell description information element in GSM 04.08 [8].

## 12.30 Call control requested action

This subclause applies to the release 97 feature \$(TRCC)\$.

| Byte(s)              | Description                       | Length |
|----------------------|-----------------------------------|--------|
| 1                    | Call control requested action tag | 1      |
| 2 to (Y-1)+2         | Length (X)                        | Y      |
| (Y-1)+3 to (Y-1)+X+2 | Call control requested action     | X      |

- Call control requested action

Contents: The action given in response to the ENVELOPE (CALL CONTROL). It may contain in the same order as given by the SIM, the address or SS string, the capability configuration parameters, the called party sub-address and the alpha identifier.

Coding: as described in subclause 9.1, starting with the first optional element given in the response data to the ENVELOPE (CALL CONTROL).

## 13 Tag values

This clause specifies the tag values used to identify the BER-TLV and SIMPLE-TLV data objects used in this specification.

### 13.1 BER-TLV tags in ME to SIM direction

| Description                                                   | Length of tag | Value |
|---------------------------------------------------------------|---------------|-------|
| SMS-PP download tag                                           | 1             | 'D1'  |
| Cell Broadcast download tag                                   | 1             | 'D2'  |
| Menu Selection tag                                            | 1             | 'D3'  |
| Call control tag                                              | 1             | 'D4'  |
| MO Short message control tag (if \$(MOSMcontrol is supported) | 1             | 'D5'  |
| Event download tag, if \$(Event)\$ is supported               | 1             | 'D6'  |

### 13.2 BER-TLV tags in SIM TO ME direction

| Description               | Length of tag | Value |
|---------------------------|---------------|-------|
| Proactive SIM command tag | 1             | 'D0'  |

### 13.3 SIMPLE-TLV tags in both directions

|    |           |   |   |   |   |   |   |
|----|-----------|---|---|---|---|---|---|
| 8  | 7         | 6 | 5 | 4 | 3 | 2 | 1 |
| CR | Tag value |   |   |   |   |   |   |

CR: Comprehension required for this object.

Unless otherwise stated, for SIMPLE-TLV data objects it is the responsibility of the SIM application and the ME to decide the value of the CR flag for each data object in a given command.

Handling of the CR flag at the receiving entity is described in subclause 6.10.

| CR                         | Value |
|----------------------------|-------|
| Comprehension required     | 1     |
| Comprehension not required | 0     |

| Description                             | Length of tag | Tag value, bits 1-7<br>(Range: '01' - '7E') | Tag<br>(CR and Tag value) |
|-----------------------------------------|---------------|---------------------------------------------|---------------------------|
| Command details tag                     | 1             | '01'                                        | '01' or '81'              |
| Device identity tag                     | 1             | '02'                                        | '02' or '82'              |
| Result tag                              | 1             | '03'                                        | '03' or '83'              |
| Duration tag                            | 1             | '04'                                        | '04' or '84'              |
| Alpha identifier tag                    | 1             | '05'                                        | '05' or '85'              |
| Address tag                             | 1             | '06'                                        | '06' or '86'              |
| Capability configuration parameters tag | 1             | '07'                                        | '07' or '87'              |
| Called party subaddress tag             | 1             | '08'                                        | '08' or '88'              |
| SS string tag                           | 1             | '09'                                        | '09' or '89'              |
| USSD string tag                         | 1             | '0A'                                        | '0A' or '8A'              |
| SMS TPDU tag                            | 1             | '0B'                                        | '0B' or '8B'              |
| Cell Broadcast page tag                 | 1             | '0C'                                        | '0C' or '8C'              |
| Text string tag                         | 1             | '0D'                                        | '0D' or '8D'              |
| Tone tag                                | 1             | '0E'                                        | '0E' or '8E'              |
| Item tag                                | 1             | '0F'                                        | '0F' or '8F'              |
| Item identifier tag                     | 1             | '10'                                        | '10' or '90'              |
| Response length tag                     | 1             | '11'                                        | '11' or '91'              |
| File List tag                           | 1             | '12'                                        | '12' or '92'              |
| Location Information tag                | 1             | '13'                                        | '13' or '93'              |
| IMEI tag                                | 1             | '14'                                        | '14' or '94'              |
| Help request tag                        | 1             | '15'                                        | '15' or '95'              |
| Network Measurement Results tag         | 1             | '16'                                        | '16' or '96'              |
| Default Text                            | 1             | '17'                                        | '17' or '97'              |
| Items Next Action Indicator tag         | 1             | '18'                                        | '18' only                 |
| Event list tag                          | 1             | '19'                                        | '19' or '99'              |
| Cause tag                               | 1             | '1A'                                        | '1A' or '9A'              |
| Location status tag                     | 1             | '1B'                                        | '1B' or '9B'              |
| Transaction identifier tag              | 1             | '1C'                                        | '1C' or '9C'              |
| BCCH channel list tag                   | 1             | '1D'                                        | '1D' or '9D'              |
| Call control requested action           | 1             | '27'                                        | '27' or 'A7'              |

## 13.4 Type of Command and Next Action Indicator

The table below shows the values which shall be used for Type of Command coding (see subclause 12.6) and Next Action Indicator coding (see subclause 12.24).

| Value | Name                                           | used for Type of Command coding | used for Next Action Indicator coding (if \$(NextAction)\$ is supported) |
|-------|------------------------------------------------|---------------------------------|--------------------------------------------------------------------------|
| '00'  |                                                | -                               | -                                                                        |
| '01'  | REFRESH                                        | X                               |                                                                          |
| '02'  | MORE TIME                                      | X                               |                                                                          |
| '03'  | POLL INTERVAL                                  | X                               |                                                                          |
| '04'  | POLLING OFF                                    | X                               |                                                                          |
| '05'  | SET UP EVENT LIST, if \$(Event)\$ is supported | X                               |                                                                          |
| '10'  | SET UP CALL                                    | X                               | X                                                                        |
| '11'  | SEND SS                                        | X                               | X                                                                        |
| '12'  | SEND USSD                                      | X                               | X                                                                        |
| '13'  | SEND SHORT MESSAGE                             | X                               | X                                                                        |
| '20'  | PLAY TONE                                      | X                               | X                                                                        |
| '21'  | DISPLAY TEXT                                   | X                               | X                                                                        |
| '22'  | GET INKEY                                      | X                               | X                                                                        |
| '23'  | GET INPUT                                      | X                               | X                                                                        |
| '24'  | SELECT ITEM                                    | X                               | X                                                                        |
| '25'  | SET UP MENU                                    | X                               | X                                                                        |
| '26'  | PROVIDE LOCAL INFORMATION                      | X                               |                                                                          |
| '81'  | End of the proactive session                   | not applicable                  | X                                                                        |

## 14 Allowed Type of command and Device identity combinations

Only certain types of commands can be issued with certain device identities. These are defined below:

| Command description                          | Source  | Destination         |
|----------------------------------------------|---------|---------------------|
| CALL CONTROL                                 | ME      | SIM                 |
| CELL BROADCAST DOWNLOAD                      | Network | SIM                 |
| COMMAND RESULT                               | ME      | SIM                 |
| DISPLAY TEXT                                 | SIM     | Display             |
| EVENT DOWNLOAD (if \$(Event)\$ is supported) |         |                     |
| - MT call                                    | Network | SIM                 |
| - Call connected at near end (MT call)       | ME      | SIM                 |
| - Call connected at far end (MO call)        | Network | SIM                 |
| - Call disconnected at near end              | ME      | SIM                 |
| - Call disconnected at far end               | Network | SIM                 |
| - Location status                            | ME      | SIM                 |
| - User activity                              | ME      | SIM                 |
| - Idle screen available                      | Display | SIM                 |
| GET INKEY                                    | SIM     | ME                  |
| GET INPUT                                    | SIM     | ME                  |
| MENU SELECTION                               | Keypad  | SIM                 |
| MO SHORT MESSAGE CONTROL                     | ME      | SIM                 |
| MORE TIME                                    | SIM     | ME                  |
| PLAY TONE                                    | SIM     | Earpiece (see note) |
| POLLING OFF                                  | SIM     | ME                  |
| POLL INTERVAL                                | SIM     | ME                  |
| PROFILE DOWNLOAD                             | ME      | SIM                 |
| REFRESH                                      | SIM     | ME                  |
| SELECT ITEM                                  | SIM     | ME                  |
| SEND SHORT MESSAGE                           | SIM     | Network             |
| SEND SS                                      | SIM     | Network             |
| SEND USSD                                    | SIM     | Network             |
| SET UP CALL                                  | SIM     | Network             |
| SET UP EVENT LIST                            | SIM     | ME                  |
| SET UP MENU                                  | SIM     | ME                  |
| SMS-PP DOWNLOAD                              | Network | SIM                 |
| PROVIDE LOCAL INFORMATION                    | SIM     | ME                  |

NOTE: The ME may route the tone to other loudspeakers (external ringer, car kit) if more appropriate.

---

## 15 Security requirements

GSM 03.48 [24] specifies standardised methods of securing the content of application messages to and from the SIM Application Toolkit. If it is necessary to secure application messaging to Toolkit applications, then GSM 03.48 may be used.

## Annex A (normative): Support of SIM Application Toolkit by Mobile Equipment

Support of SIM Application Toolkit is optional for Mobile Equipment. However, any ME claiming to support SIM Application Toolkit need not support all toolkit functions from all numerical classes, but, support of all functions within a class is mandatory.

Letter classes may supplement any appropriate numerical class.

Initially, all new commands, that are not allocated to the latest numerical class, will become a letter class. These will be allocated the identifier Lc, and will be differentiated by their Command Descriptions. They will be entered into the latest numerical class column.

When a new numerical class is finalised, all of the Lc Commands will be reviewed and either included in a numerical class or allocated a specific lower case letter. At this time, letter classes may be combined to form capital letter classes, support of all functions within a capital letter class is mandatory.


The table below indicates the classes. Class 3 is still under discussion, and further features may be added.

| Command description               | Classes |      |   |    |
|-----------------------------------|---------|------|---|----|
|                                   | 1       | 1bis | 2 | 3  |
| CALL CONTROL                      |         |      | X | X  |
| CELL BROADCAST DOWNLOAD           |         |      | X | X  |
| DISPLAY TEXT                      |         | X    | X | X  |
| EVENT DOWNLOAD \$(Event)\$        |         |      |   |    |
| - MT call                         |         |      |   | X  |
| - Call connected                  |         |      |   | X  |
| - Call disconnected               |         |      |   | X  |
| - Location status                 |         |      |   | X  |
| - User activity                   |         |      |   | X  |
| - Idle screen available           |         |      |   | X  |
| GET INKEY                         |         |      | X | X  |
| GET INPUT                         |         | X    | X | X  |
| MENU SELECTION                    |         | X    | X | X  |
| MO SHORT MESSAGE CONTROL          |         |      |   | X  |
| MORE TIME                         |         |      | X | X  |
| PLAY TONE                         |         | X    | X | X  |
| POLLING OFF                       |         |      | X | X  |
| POLL INTERVAL                     |         |      | X | X  |
| REFRESH                           | X       | X    | X | X  |
| SELECT ITEM                       |         | X    | X | X  |
| SEND SHORT MESSAGE                |         | X    | X | X  |
| SEND SS                           |         | X    | X | X  |
| SEND USSD                         |         |      |   | X  |
| SET UP CALL (idle only)           |         | X    | X | X  |
| SET UP CALL (full implementation) |         |      | X | X  |
| SET UP EVENT LIST, \$(Event)\$    |         |      |   | X  |
| SET UP MENU                       |         | X    | X | X  |
| SMS-PP DOWNLOAD                   | X       | X    | X | X  |
| PROVIDE LOCAL INFORMATION         |         | X    | X | X  |
| NEW FEATURE 1 (example)           |         |      |   | Lc |
| NEW FEATURE 2 (example)           |         |      |   | Lc |
| NEW FEATURE 3 (example)           |         |      |   | Lc |


## Annex B (informative): Example command sequences for proactive SIM

This subclause shows example APDU sequences for proactive SIM commands, and is for information only.

### Case 1: Proactive SIM request following a normal command from the ME

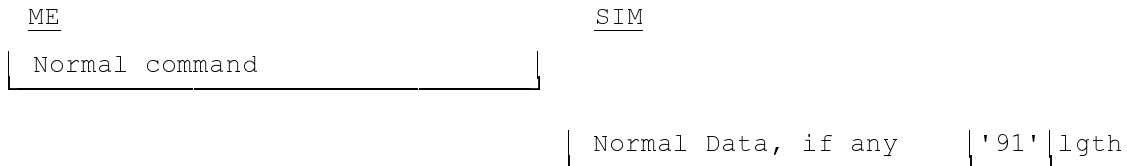


[Possible "normal GSM operation" command/response pairs]

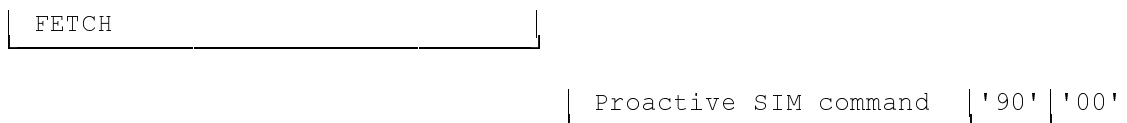


[Possible "normal GSM operation" command/response pairs]


[ME performs command]

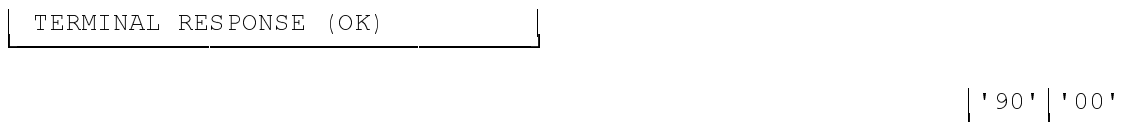

### Case 2: Proactive SIM request following a (polling) STATUS command from the ME

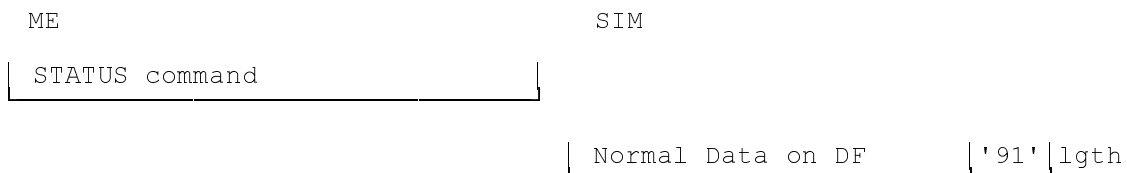


[Possible "normal GSM operation" command/response pairs]

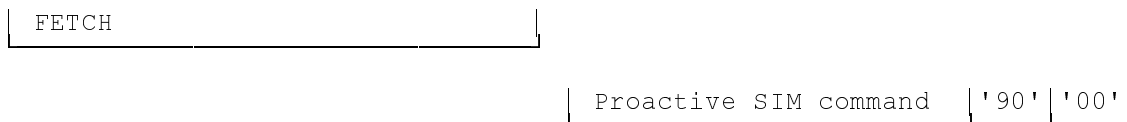

[Possible "normal GSM operation" command/response pairs]

[ME performs command]

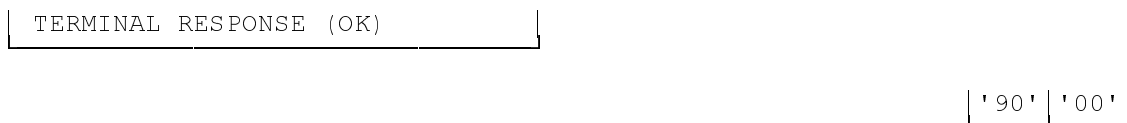

**Case 3: STATUS command from ME, not followed by any proactive SIM request**

ME

SIM

|                |
|----------------|
| STATUS command |
|----------------|

|                   |      |      |
|-------------------|------|------|
| Normal Data on DF | '90' | '00' |
|-------------------|------|------|

**Case 4: Unsuccessful proactive SIM request, followed by SIM asking the ME to retry**

ME

SIM

|                |
|----------------|
| Normal command |
|----------------|

|                     |      |      |
|---------------------|------|------|
| Normal Data, if any | '91' | lgth |
|---------------------|------|------|

[Possible "normal GSM operation" command/response pairs]

|       |
|-------|
| FETCH |
|-------|

|                       |      |      |
|-----------------------|------|------|
| Proactive SIM command | '90' | '00' |
|-----------------------|------|------|

[Possible "normal GSM operation" command/response pairs]

[ME performs command]

|                                       |
|---------------------------------------|
| TERMINAL RESPONSE (temporary problem) |
|---------------------------------------|

|      |      |
|------|------|
| '91' | lgth |
|------|------|

[Possible "normal GSM operation" command/response pairs]

|       |
|-------|
| FETCH |
|-------|

|                                 |      |      |
|---------------------------------|------|------|
| Repeat of proactive SIM command | '90' | '00' |
|---------------------------------|------|------|

[Possible "normal GSM operation" command/response pairs]

[ME performs command]

|                        |
|------------------------|
| TERMINAL RESPONSE (OK) |
|------------------------|

|      |      |
|------|------|
| '90' | '00' |
|------|------|

**Case 5: Unsuccessful proactive SIM request, and the SIM does not ask for the ME to retry**

ME

SIM

|                |
|----------------|
| Normal command |
|----------------|

|                     |      |      |
|---------------------|------|------|
| Normal Data, if any | '91' | lgth |
|---------------------|------|------|

[Possible "normal GSM operation" command/response pairs]

|       |
|-------|
| FETCH |
|-------|

|                       |
|-----------------------|
| Proactive SIM command |
|-----------------------|

|      |      |
|------|------|
| '90' | '00' |
|------|------|

[Possible "normal GSM operation" command/response pairs]

[ME performs command]

|                                       |
|---------------------------------------|
| TERMINAL RESPONSE (temporary problem) |
|---------------------------------------|

|      |      |
|------|------|
| '90' | '00' |
|------|------|


---

## Annex C (informative): Example of DISPLAY TEXT Proactive SIM Command

Example of DISPLAY TEXT Proactive SIM Command  
(BER-TLV Data Object)

| Byte#   | Value (Hex) | Description                                                 |
|---------|-------------|-------------------------------------------------------------|
| 1       | D0          | Proactive SIM command tag                                   |
| 2       | 0F          | length                                                      |
| 3       | 81          | command details tag                                         |
| 4       | 03          | length                                                      |
| 5       | 01          | command number                                              |
| 6 - 7   | 21 00       | Display text (normal priority, clear message after a delay) |
| 8       | 82          | Device identities tag                                       |
| 9       | 02          | length                                                      |
| 10      | 81          | source: SIM                                                 |
| 11      | 02          | destination: Display                                        |
| 12      | 8D          | Text string tag                                             |
| 13      | 04          | length                                                      |
| 14      | 04          | Data coding scheme ('04'=8-bit default SMS)                 |
| 15 - 17 | 53,41,54    | text string ("SAT")                                         |

## Annex D (normative): Structure of SIM Application Toolkit communications

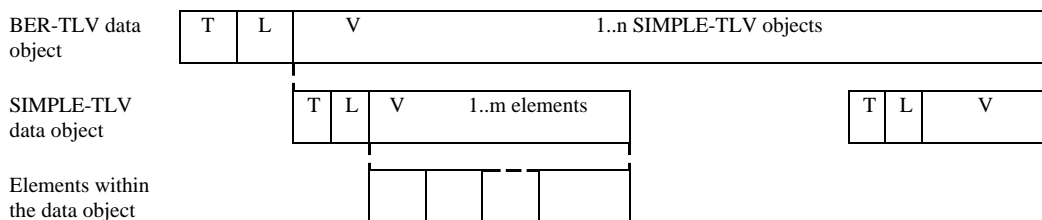

SIM Application Toolkit commands and responses are sent across the interface as BER-TLV data objects. Each APDU shall only contain one BER-TLV object.

The tag is a constant value, length one byte, indicating it is a SIM Application Toolkit command.

The length is coded onto 1, or 2 bytes according to ISO/IEC 7816-6 [17]. The following table details this coding:

| Length  | Byte 1                | Byte 2                |
|---------|-----------------------|-----------------------|
| 0-127   | length ('00' to '7F') | not present           |
| 128-255 | '81'                  | length ('80' to 'FF') |

Any length within the APDU limits (up to 255 bytes) can thus be encoded on two bytes. This coding is chosen to remain compatible with ISO/IEC 7816-6 [17].

Any values for byte 1 or byte 2 that are not shown above shall be treated as an error and the whole message shall be rejected.

The value part of the BER-TLV data object consists of SIMPLE-TLV data objects, as shown in the description of the SIMPLE-TLV data objects on individual commands. It is mandatory for SIMPLE-TLV data objects to be provided in the order given in the description of each command. New SIMPLE-TLV data objects can be added to the end of a command.


The M/O columns specify whether it is mandatory or optional for the sender to send that particular SIMPLE-TLV data object for compliance with the current version of this TS. The Min (Minimum Set) column describes whether it is necessary for the receiver to have received that particular SIMPLE-TLV data object to be able to attempt at least the most basic form of this command. The procedure for dealing with incomplete messages is described in subclause 6.10.

'00' and 'FF' are never used as tag values for BER-TLVs. This is in accordance with ISO/IEC 7816-6 [17]. Padding characters are not allowed.

See ISO/IEC 7816-6 [17] for more information on data objects.

# Annex E (informative): ME display in proactive SIM session

Example of the ME display whilst the ME is in a proactive SIM session.

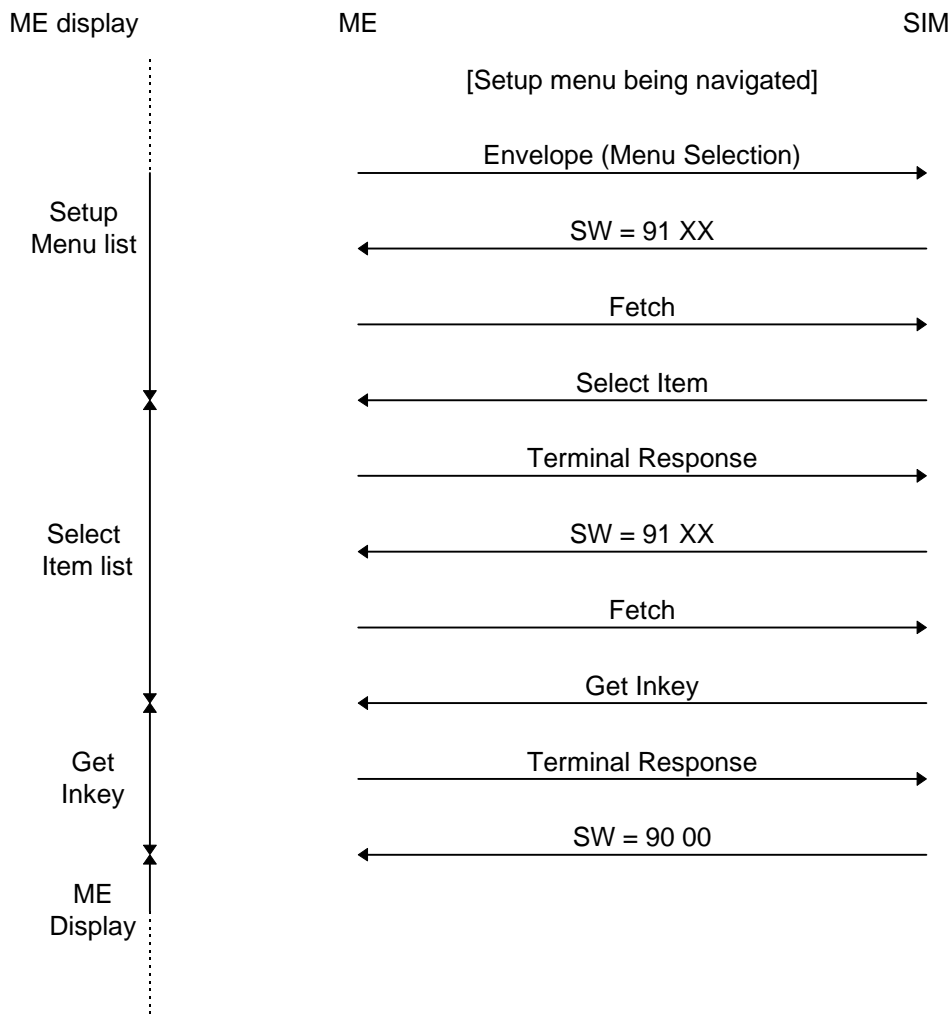

## Annex F (informative): Help information feature processing

This subclause applies to the release 97 feature, \$(Helpinfo)\$.

The following example shows the use of the commands Menu Selection / Select Item and Get Input in conjunction with the help information feature.

| ME                                                                   | SIM                                                                                    |
|----------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| TERMINAL PROFILE                                                     | -----><br><----- 91xx                                                                  |
| FETCH                                                                | -----><br><----- SET UP MENU (Help available)                                          |
| TERMINAL RESPONSE (OK)                                               | -----><br><----- 90 00                                                                 |
| ...                                                                  |                                                                                        |
| ENVELOPE (MENU SELECTION,<br>help on menu item m)                    | -----><br><----- 91 xx                                                                 |
| FETCH                                                                | -----><br><----- DISPLAY TEXT (Help info to item m)                                    |
| TERMINAL RESPONSE (OK)                                               | -----><br><----- 90 00                                                                 |
| (ME offers menu again and user<br>selects item m)                    |                                                                                        |
| ENVELOPE (MENU SELECTION,<br>select item m)                          | -----><br><----- 91 xx                                                                 |
| FETCH                                                                | -----><br><----- SELECT ITEM<br>(Item list under item m, help available)               |
| TERMINAL RESPONSE<br>(Help on item mn in item list under<br>item m ) | -----><br><----- 91 xx                                                                 |
| FETCH                                                                | -----><br><----- DISPLAY TEXT (Help info to item mn)                                   |
| TERMINAL RESPONSE (OK)                                               | -----><br><----- 91 xx                                                                 |
| FETCH                                                                | -----><br><----- Repetition of SELECT ITEM<br>(Item list under item m, help available) |
| ...                                                                  |                                                                                        |
| FETCH                                                                | -----><br><----- 91xx                                                                  |
| FETCH                                                                | -----><br><----- GET INPUT                                                             |
| TERMINAL RESPONSE<br>(Help info required)                            | -----><br><----- 91 xx                                                                 |
| FETCH                                                                | -----><br><----- DISPLAY TEXT (Help info)                                              |
| TERMINAL RESPONSE (OK)                                               | -----><br><----- 91 xx                                                                 |
| FETCH                                                                | -----><br><----- Repetition of GET INPUT                                               |
| TERMINAL RESPONSE (OK)                                               | -----><br>...                                                                          |
| ...                                                                  |                                                                                        |

---

## Annex G (informative): Monitoring of events

This subclause applies to the release 97 feature, \$(Event)\$.

Some of the events monitored through the event download mechanism are reported by the mobile each time the event occurs, while other events are reported only once (the ME removes the event type from the current event list once the event occurs).

This is summarised in the table below:

| <b>Event</b>          | <b>Continuously reported</b> | <b>Reported once</b> |
|-----------------------|------------------------------|----------------------|
| MT call               | X                            |                      |
| Call connected        | X                            |                      |
| Call disconnected     | X                            |                      |
| Location status       | X                            |                      |
| User activity         |                              | X                    |
| Idle screen available |                              | X                    |

## Annex H (informative): Change history

This annex lists all change requests approved for the present document since the first phase2+ version was approved by ETSI SMG.

| SMG# | SMG tdoc | SMG9 tdoc | VERS  | CR   | RV | PH  | CAT | SUBJECT                                                     | Resulting Version |
|------|----------|-----------|-------|------|----|-----|-----|-------------------------------------------------------------|-------------------|
| s19  | 515/96   | 134/96    | 5.0.0 | A001 | 2  | R96 | B   | Enhancement of call control (refresh command)               | 5.1.0             |
| s20  | 580/96   | 206/96    | 5.1.0 | A002 |    | R96 | B   | Barred Dialling Numbers                                     | 5.2.0             |
|      | 703/96   | 208/96    |       | A003 |    | R96 | B   | Enhancement of REFRESH command                              |                   |
|      | 703/96   | 208/96    |       | A004 |    | R96 | C   | Enhancement to the command DISPLAY TEXT                     |                   |
|      | 703/96   | 208/96    |       | A006 |    | R96 | B   | Enhancement to the SIM Application Toolkit                  |                   |
| s21  | 102/97   | 087/97    | 5.2.0 | A007 | 1  | R96 | B   | Ending of proactive session.                                | 5.3.0             |
|      | 102/97   | 063/97    |       | A008 |    | R96 | D   | Example of Proactive SIM Command                            |                   |
|      | 102/97   | 049/97    |       | A009 |    | R96 | D   | Editorial clarifications to Text                            |                   |
| s22  | 357/97   | 151/97    | 5.3.0 | A010 |    | R96 | F   | General Result values : interpretation                      | 5.4.0             |
|      | 357/97   | 171/97    |       | A011 | 1  | R96 | D   | Clarifications to the DISPLAY TEXT command                  |                   |
|      | 357/97   | 176/97    |       | A012 | 1  | R96 | D   | Length indicator clarification of some simple TLV data obj. |                   |
|      | 357/97   | 172/97    |       | A014 | 1  | R96 | D   | Clarification of ME & SIM toolkit actions during REFRESH    |                   |
|      | 357/97   | 178/97    |       | A015 | 1  | R96 | F   | Set Up Menu command without Item Data Object                |                   |
|      | 357/97   | 169/97    |       | A016 |    | R96 | F   | Call control, corrections and editorial clarifications      |                   |
|      | 357/97   | 170/97    |       | A017 |    | R96 | C   | Call Control : call set-up, SS and USSD operation           |                   |
|      | 357/97   | 190/97    |       | A018 |    | R96 | F   | Call control, USSD operations                               |                   |
| s23  | 789/97   | 284/97    | 5.4.0 | A020 | 1  | R97 | B   | Help information facility                                   | 5.5.0             |
|      | 789/97   | 257/97    |       | A021 |    | R96 | F   | Corrections to Annex D                                      |                   |
|      | 789/97   | 263/97    |       | A022 |    | R96 | F   | Response data following an ENVELOPE command                 |                   |
|      | 789/97   | 280/97    |       | A023 | 1  | R96 | F   | Length of resp. data after SMS-PP ENVELOPE command          |                   |
|      | 789/97   | 265/97    |       | A024 |    | R96 | F   | Clarification of the TP-Message Ref incrementation          |                   |
|      | 789/97   | 266/97    |       | A025 |    | R96 | F   | Correction of the use of the Comprehension Required flag    |                   |
|      | 789/97   | 267/97    |       | A026 |    | R96 | F   | DCS byte coding for send short message command              |                   |
|      | 789/97   | 292/97    |       | A027 |    | R96 | F   | Concerning Annex C                                          |                   |
|      | 789/97   | 274/97    |       | A028 |    | R96 | F   | Clarification of POLLING OFF command                        |                   |
|      | 789/97   | 275/97    |       | A029 |    | R96 | F   | Interaction between SIM toolkit and emergency calls         |                   |
|      | 789/97   | 269/97    |       | A030 |    | R96 | F   | removal of setup menu                                       |                   |
|      | 789/97   | 278/97    |       | A031 |    | R96 | F   | Clarification of result retry                               |                   |
|      | 789/97   | 251/97    |       | A032 |    | R96 | F   | Coding of simple TLV data objects                           |                   |
|      | 789/97   | 237/97    |       | A033 |    | R96 | F   | Interaction between proactive commands and FDN              |                   |
|      | 789/97   | 254/97    |       | A034 |    | R96 | F   | Toolkit and ME display interaction                          |                   |
|      | 789/97   | 279/97    |       | A035 |    | R96 | F   | Poll interval                                               |                   |
|      | 789/97   | 240/97    |       | A036 |    | R96 | F   | Clarifications to REFRESH command.                          |                   |
|      | 789/97   | 282/97    |       | A037 | 1  | R96 | F   | Clarification of length and removal of padding              |                   |
|      | 789/97   | 289/97    |       | A038 | 1  | R96 | F   | Correction to display text                                  |                   |
|      | 789/97   | 290/97    |       | A040 | 1  | R96 | F   | Terminal response without command details                   |                   |
|      | 789/97   | 288/97    |       | A041 |    | R96 | F   | Number of possible ongoing proactive commands               |                   |
|      | 789/97   | 291/97    |       | A042 |    | R96 | F   | Provide Local Information                                   |                   |
|      | 789/97   | 276/97    |       | A043 |    | R96 | F   | Interaction with Last Number Dialed                         |                   |
| s24  | 97-1124  | 97/362    | 5.5.0 | A044 |    | R96 | F   | high priority of DISPLAY TEXT                               | 5.6.0             |
|      | 97-0886  | 97/363    |       | a045 |    | R97 | B   | new type of DISPLAY TEXT and SET UP CALL                    |                   |
|      | 97-0886  | 97/373    |       | a047 | 1  | R97 | D   | Extension of the Annex on help information feature.         |                   |
|      | 97-0886  | 97/367    |       | a048 |    | R97 | C   | Enhancement to PROVIDE LOCAL INFORMATION                    |                   |
|      | 97-0886  | 97/370    |       | a049 |    | R96 | F   | GET INPUT - Hidden text                                     |                   |
|      | 97-0886  | 97/375    |       | a050 |    | R97 | B   | Default choice possibility for Get Input                    |                   |
|      | 97-0886  | 97/382    |       | a051 | 2  | R97 | B   | Improvement of the dialogue with the user                   |                   |
|      | 97-0886  | 97/352    |       | a052 |    | R97 | C   | cell identity available in call control by SIM              |                   |
|      | 97-0886  | 97/377    |       | a053 |    | R96 | F   | Profile download                                            |                   |
|      | 97-0886  | 97/380    |       | a054 |    | R97 | B   | send USSD                                                   |                   |
|      | 97-0886  | 97/381    |       | a055 |    | R97 | B   | MO SMS control by SIM                                       |                   |

(continued)

## Change history (concluded)

| SMG#                                                                                                                                                                                                                                                | SMG tdoc | SMG9 tdoc | VERS  | CR   | RV | PH  | CAT | SUBJECT                                                                                   | Resulting Version |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------|-------|------|----|-----|-----|-------------------------------------------------------------------------------------------|-------------------|
| NOTE: At SMG #25, it was decided to create a version 6.0.0 of every specification that contained at least one release '97 workitem. Thus release 97 CRs approved at or after SMG #25 will only be found in the version 6.x.y of this specification. |          |           |       |      |    |     |     |                                                                                           |                   |
| s25                                                                                                                                                                                                                                                 | 98-0158  | 98p092    | 5.6.0 | A046 | 1  | R96 | F   | Proactive Commands versus possible Terminal Response                                      | 6.0.0             |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p068    |       | A056 |    | R97 | C   | Indications to be given to the user                                                       |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p071    |       | A057 |    | R96 | F   | Length of text string TLVs                                                                |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p058    |       | A058 |    | R96 | F   | Corrections to Command results                                                            |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p076    |       | A059 |    | R97 | F   | MO SM control by SIM                                                                      |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p081    |       | A060 | 1  | R97 | B   | Previously selected item indication                                                       |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p096    |       | A061 | 1  | R97 | B   | Event driven information                                                                  |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p106    |       | A062 | 1  | R97 | B   | Addition of UCS2 alphabet in the proactive commands                                       |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p098    |       | A063 | 1  | R96 | F   | PLAY TONE - addition of user abort while tone is playing                                  |                   |
|                                                                                                                                                                                                                                                     | 98-0158  | 98p097    |       | A064 |    | R97 | C   | Addition of warning of incompleteness of class 3                                          |                   |
| s26                                                                                                                                                                                                                                                 | 98-0399  | 98p211    | 6.0.0 | A067 |    | R97 | F   | Network not supporting / allowing call hold during the SET UP CALL                        | 6.1.0             |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p213    |       | A069 |    | R97 | F   | Correction to unknown tag value                                                           |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p214    |       | A070 |    | R97 | F   | Item Identifier in TERMINAL RESPONSE to SELECT ITEM                                       |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p216    |       | A072 |    | R97 | F   | Correction to PLAY TONE                                                                   |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p217    |       | A073 |    | R97 | F   | Network measurement results                                                               |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p219    |       | A075 |    | R97 | F   | Missing response code                                                                     |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p242    |       | A076 | 1  | R97 | F   | SIM Toolkit Class Handling                                                                |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p222    |       | A077 |    | R97 | F   | Addition of reference to GSM 03.48                                                        |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p249    |       | A082 |    | R97 | F   | RP-ACK RP-ERROR for SIM data download error                                               |                   |
|                                                                                                                                                                                                                                                     | 98-0399  | 98p256    |       | A089 | 1  | R97 | F   | clarification to FETCH command                                                            |                   |
| s27                                                                                                                                                                                                                                                 | 98-0669  | 98p253    | 6.1.0 | A087 |    | R97 | B   | Introduction of a 1bis SIM toolkit class                                                  | 6.2.0             |
|                                                                                                                                                                                                                                                     | 98-0670  | 98p344    |       | A093 |    | R97 | F   | Additional information field mandatory in case of USSD Return Error result.               |                   |
|                                                                                                                                                                                                                                                     | 98-0670  | 98p346    |       | A095 |    | R97 | F   | Possible result values for SET UP EVENT LIST command                                      |                   |
|                                                                                                                                                                                                                                                     | 98-0670  | 98p356    |       | A097 |    | R97 | A   | Clarification regarding the ME changing the contents of SIM commands e.g. SEND SMS        |                   |
|                                                                                                                                                                                                                                                     | 98-0670  | 98p362    |       | A099 |    | R97 | F   | Clarification about USSD return result                                                    |                   |
|                                                                                                                                                                                                                                                     | 98-0670  | 98p375    |       | A101 |    | R97 | F   | Clarification of the '93 00' status response handling                                     |                   |
|                                                                                                                                                                                                                                                     | 98-0670  | 98p370    |       | A109 |    | R97 | F   | Interaction between call control by SIM / MO short message control and proactive commands |                   |

---

## History

| <b>Document history</b> |               |             |
|-------------------------|---------------|-------------|
| V6.1.0                  | July 1998     | Publication |
| V6.2.0                  | November 1998 | Publication |
|                         |               |             |
|                         |               |             |
|                         |               |             |